


Off-Grid Hybrid Inverter

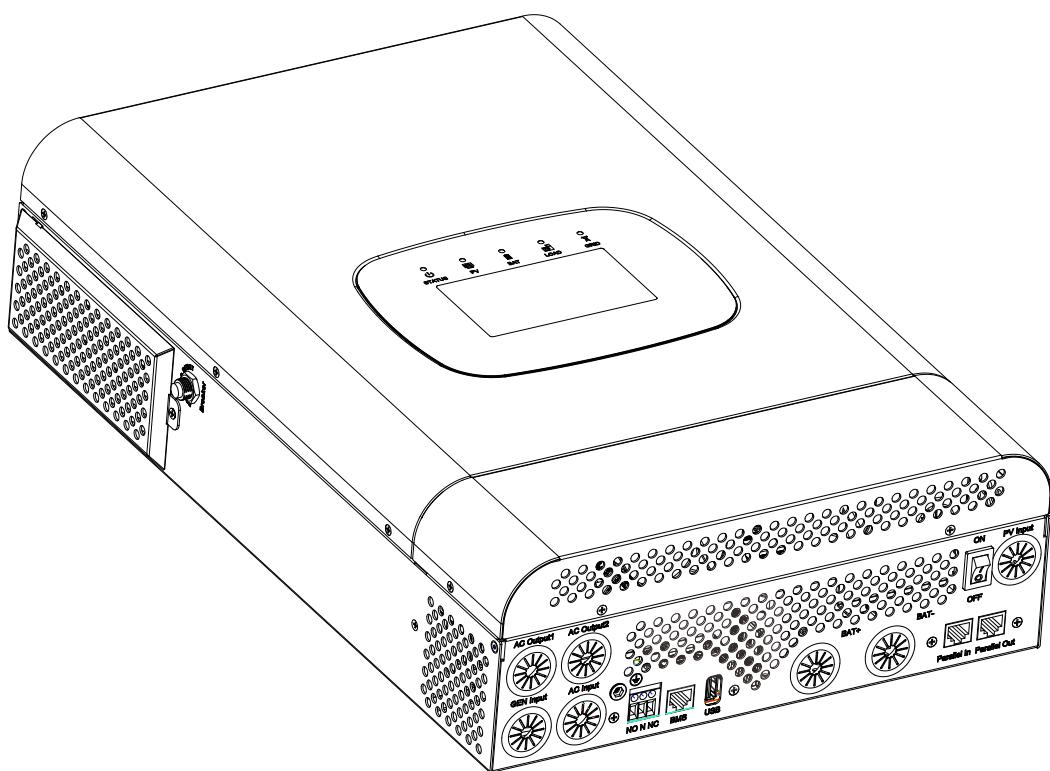

Product Model
A0-5~6KSL-G3

Full Hybrid Inverter V1.1

Important Instructions

The instructions contain all the safety alerts, installation instructions, and operation instructions of the AO-5~6KSL-G3 Off-Grid Hybrid Inverter. Please read the instructions carefully before installation and use, and properly keep it for future reference.

- There is an unsafe voltage in the device. Do not disassemble the device by yourself in case of electric shock. Please contact the local qualified service center for repair.
- The mains input and AC output are of high voltage. Please do not touch the wire connection.
- In order to reduce the risk of electric shock, please disconnect all wires before maintenance.
- Do not open the terminal cover when the device is under operation to prevent the electric shock.
- The device shall be installed by qualified professionals.
- Do not place or install the inverter in a place accessible to children.
- Do not install the inverter in a humid, greasy, flammable, explosive, dusty, or other harsh environment.
- Do not touch the hot shell when the device is under operation.
- It is recommended to install a proper fuse or circuit breaker outside the inverter.
- Disconnect the fuse or circuit breaker near the Photovoltaic (PV) array, mains, and battery terminals with insulating gloves, before installation and adjustment of the wiring of the inverter.
- After installation, please check whether all wires are tightly connected in case of fire hazards due to heat accumulation generated by loose connections.
- This inverter is a hybrid inverter. Please ensure that the inverter is the only power source of the load. Do not use it in parallel with other AC power sources in case of damage to the inverter and electrical appliance.
- In order to reduce the risk of injury, only deep-cycle rechargeable batteries can be used if using lead-acid battery.

Table of Contents

Important Instructions	1
1. Basic Information	3
1.1 Product Overview and Features	3
1.2 Introduction to the Basic System	3
1.3 Product Appearance	4
1.4 Dimensional Drawing	5
2. Installation Instructions	6
2.1 Installation Precautions	6
2.2 Wiring Specifications and Circuit Breaker Selection	7
2.3 Installation and Wiring	8
2.4 Parallel Connection and Wiring	15
3. Working Modes	28
3.1 Power Supply Modes	28
3.2 Charging Modes	30
3.3 Battery Charging Parameters	31
4. Operating Instructions for LCD Screen	33
4.1 Operation and Display Panel	33
4.2 Equipment Information Interface	36
4.3 Fault Alarm Interface	37
4.4 PV Parameter Display Page Introduction	38
4.5 Grid Parameter Display Page Introduction	39
4.6 Load Parameter Display Page Introduction	40
4.7 Battery Parameter Display Page Introduction	41
4.8 Generator Information Interface	42
4.9 System Parameter Settings Page	43
5. Other Functions	57
5.1 RS485 Communication Function	57
5.2 USB Port Function	57
5.3 Dry Contact Function	58
5.4 Wi-Fi Wireless Communication Function	59
6. APP Instructions	60
7. Protection	60
7.1 Error Code	60
7.2 Troubleshooting (partial)	61
8. System Maintenance	63
9. Technical Parameters	63

1. Basic Information

1.1 Product Overview and Features

This device is a new hybrid solar energy storage inverter integrating solar energy storage, grid charging & storage, and AC sine wave output. Controlled by the digital signal processor (DSP), the inverter has high response speed, high reliability, high standards, and other features. Its charging and AC output modes are optional to meet the characteristics of different application scenarios.


Features:

- Simplified charging modes: solar energy charging only/solar energy charging priority/hybrid charging. Each mode maximizes the use of solar energy.
- An uninterruptible power supply (UPS) function with three types of AC outputs such as grid bypass, inverter output, and hybrid power supply.
- Up to 100A maximum current for long-time charging.
- Long-term 6KW discharging at full power output without derating.
- Supports both lead-acid batteries and lithium batteries.
- Up to 27A PV input current.
- Independent input port for the diesel generator.
- USB disk upgrade and online upgrade.
- Dual outputs for smart load management.


1.2 Introduction to the Basic System

The basic application of the inverter is shown in the following figure. The complete operating system includes:

- Generator or grid
- PV module
- Battery
- Domestic load
- Energy storage inverter

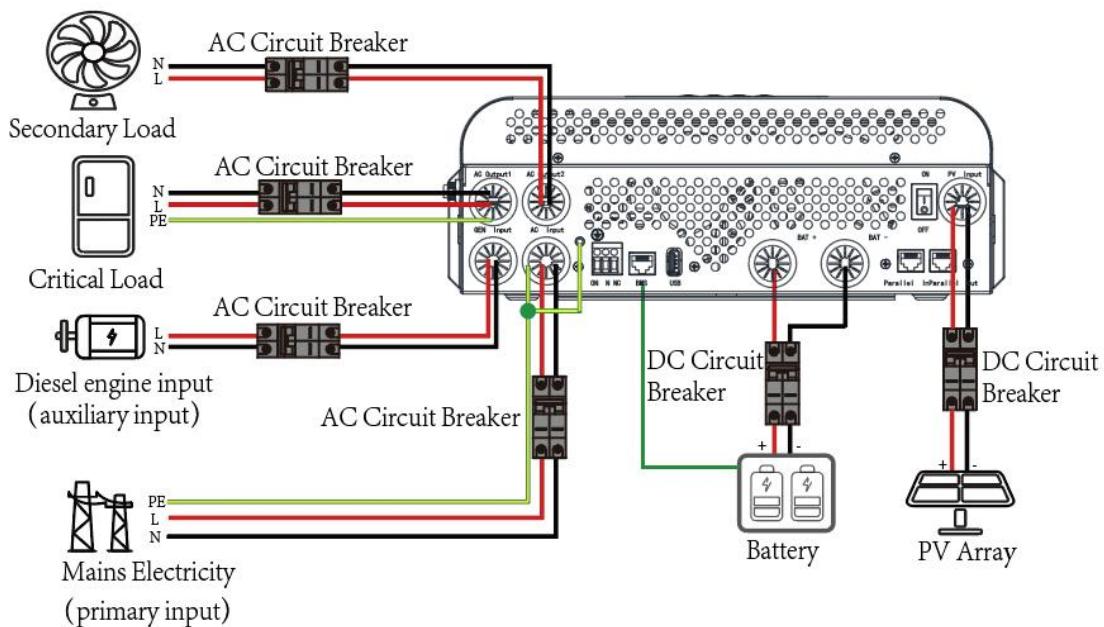


1.3 Product Appearance

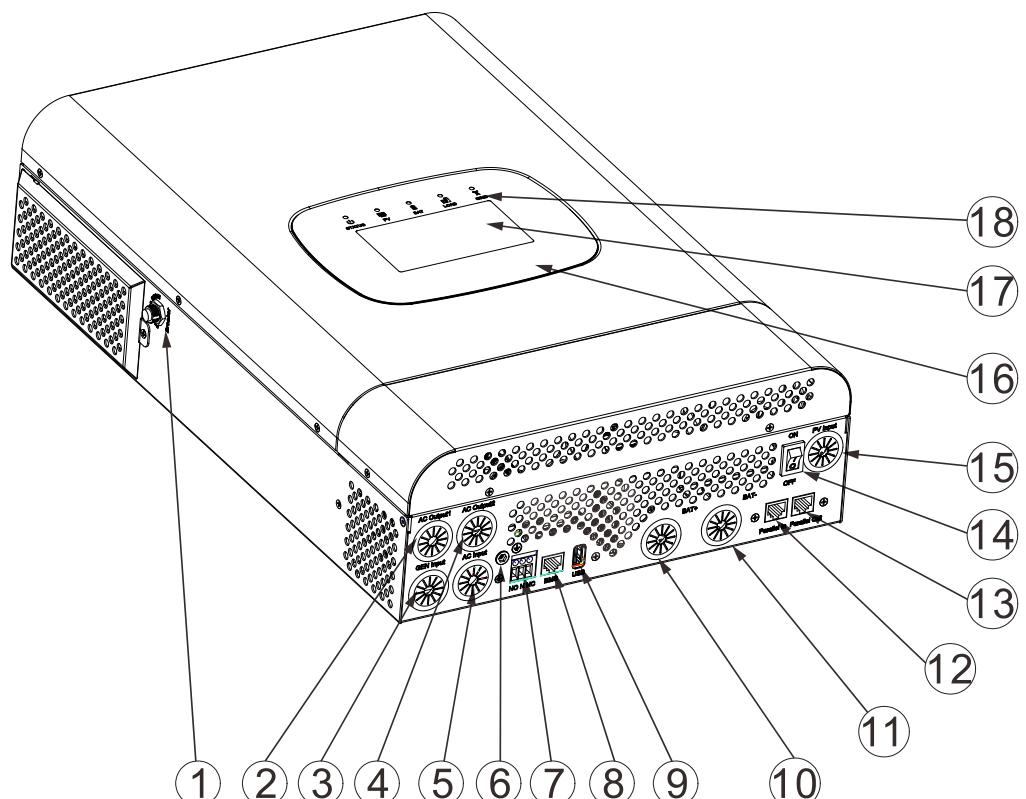

①	Overload protector for AC input	⑩	Input port for battery anode
②	AC output port 1	⑪	Input port for battery cathode
③	Input port for diesel generator	⑫	Parallel communication port (output)
④	AC output port 2	⑬	Parallel communication port (input)
⑤	AC input port	⑭	ON/OFF rocker switch
⑥	Ground screw hole	⑮	PV input port

(7)	Dry contact port	(16)	LCD tag
(8)	BMS communication port	(17)	LCD screen
(9)	USB communication port	(18)	Indicator

1.4 Dimensional Drawing

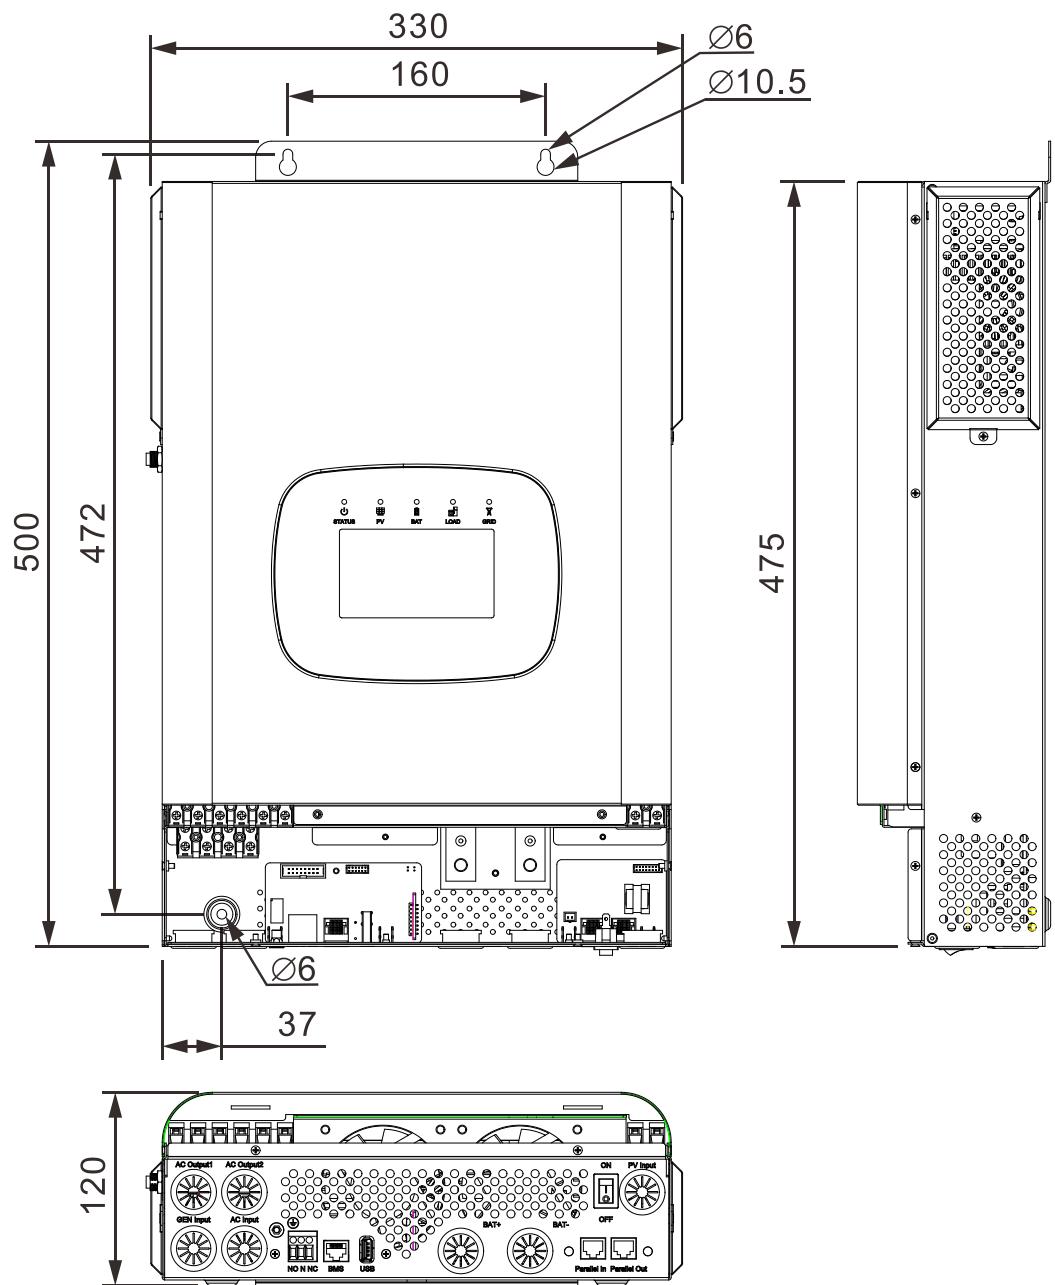


2. Installation Instructions

2.1 Installation Precautions

Before installation, please carefully read this manual to understand the procedures and get familiarized with the precautions.

- Be careful when installing the battery. Please wear protective goggles when installing the lead-acid liquid battery, and rinse with clean water promptly in case of any contact with battery acid.
- Keep the battery away from metal objects in case of short circuits.
- Make sure the environment is well-ventilated because acid gas may be generated when the battery is charged.
- Leave enough space around the inverter for heat dissipation. Do not install the inverter and the lead-acid liquid battery in the same cabinet in case that acid gas generated by the battery corrodes the inverter.
- Only charge the battery compatible with the inverter.
- Loose connectors and corroded wires may cause great heat and melt the wire insulation layer, burn the surrounding materials, and even cause a fire, so please make sure that the connectors are tightened and the wires are preferably fixed with cable ties in case of loose connectors caused by the wobbling wires during movement.
- Select connecting wires with a current density less than $5A/mm^2$ for the system.
- Avoid direct sunlight and rainwater in outdoor installation.
- After the power switch is turned off, a high voltage is still inside the inverter. Do not open or touch the internal components until the capacitor completely discharges.
- Do not install the inverter in a humid, greasy, flammable, explosive, dusty, or other harsh environment.
- It is forbidden to reversely connect the input ends of the battery. Otherwise, it may lead to the damage of the device or unpredictable risks.
- The grid input and AC output are of high voltage. Please do not touch the wire connection.
- Do not touch the operating fan in case of injury.

- Make sure that the inverter is the only power source of the load. Do not use it in parallel with other AC power sources in case of damage.
- Please check the machine before installation to make sure there is no damage in the packaging. You should receive the following items in your package

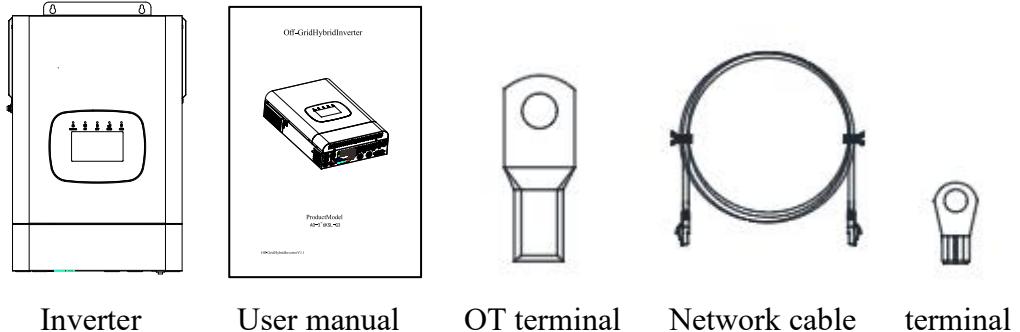

Inverter User manual OT terminal Network cable terminal

2.2 Wiring Specifications and Circuit Breaker Selection

The wiring and installation must comply with requirements of the national and local electrical codes. The wiring specifications and circuit breakers are recommended as follows:

- Specifications of the AC input and output wire diameter and circuit breaker are as follows:

Device Model	Recommended wire size of AC input/output	Maximum working current	Recommended model of the air switch or circuit breaker
AO-5~6KSL-G3	10mm ² /7AWG	35A	2P-63A

- Specifications of the PV input wire diameter and circuit breaker are as follows:

Device Model	Recommended wire size of PV input	Maximum working current	Recommended model of the air switch or circuit breaker
AO-5~6KSL-G3	5~8mm ² /8~10AWG	27A	2P-30A

- Specifications of the battery input wire diameter and circuit breaker are as follows:

Device Model	Recommended wire size of BAT input	Recommended O-type terminal	Maximum working current	Recommended model of the air switch or circuit breaker
AO-5~6KSL-G3	30mm ² /1AWG	S35-6	137A	2P-180A

- Specification of the shell earth wire is as follows:

Device Model	Recommended size of the earth wire

AO-5~6KSL-G3	4-6mm ² /10-12AWG
--------------	------------------------------

Notes:

- The wire diameters are for reference only. If the distance between the PV array and the device or between the device and the battery is long, the thicker wire can reduce the voltage drop to improve the system efficiency.
- The above wire diameters and circuit breakers are theoretically recommended. Please select the appropriate wire diameters and circuit breakers based on actual conditions.

2.3 Installation and Wiring


Warnings:

- There is unsafe voltage in the grid input and PV input. Please disconnect the circuit breaker or air switch before wiring.
- During the wiring process, please make sure the circuit breaker and air switch are disconnected in case of short circuit and the “+” and “-” polarities on each port are correctly connected. The circuit breaker must be installed on the battery port.


Installation and wiring steps are as follows:

Step 1:


Reserve a gap of 500 mm above and below the inverter and a gap of 200 mm on the left and right on an appropriate wall to ensure ventilation and heat dissipation. Unpack and take out the inverter, disassemble the terminal cover by removing the screws, and fix the inverter on the wall with three screws. As shown in the figure below, fix the device through holes 1 and 2 with M6*80 expansion bolts, and through hole 3 with M4 or M5 screws.

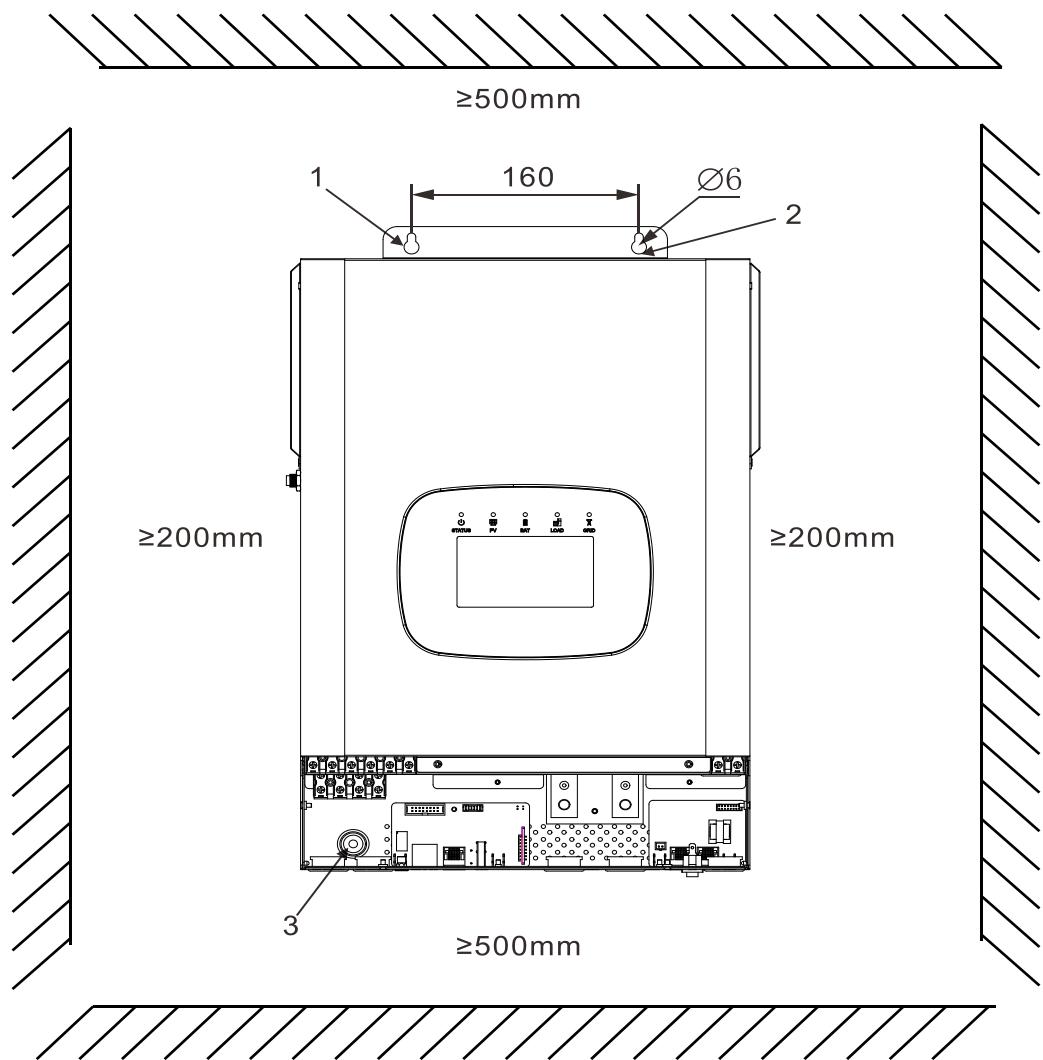

Step 2: Wiring

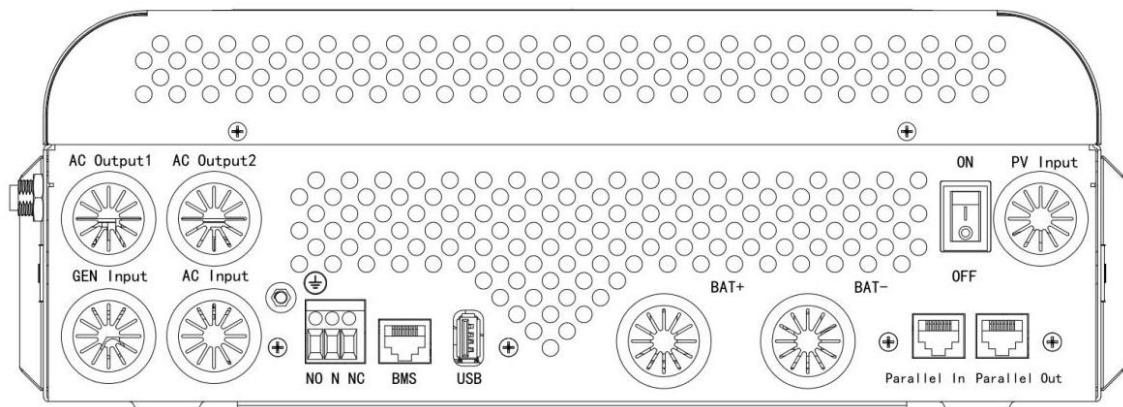

Bottom view

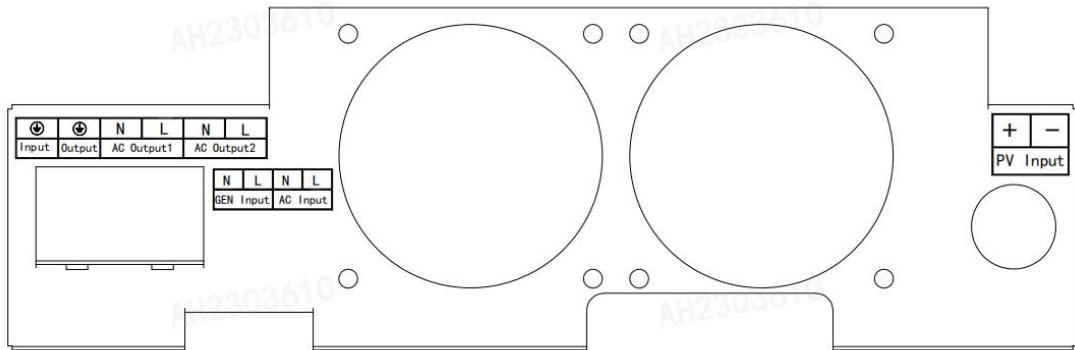


Fan panel

Please follow the steps below to perform the wiring. In order to ensure safe operation and comply with regulations, please install a circuit breaker and disconnect the circuit breaker before wiring.

(1) Connect the battery


Before wiring, disconnect the external circuit breaker and check whether the cables used are thick enough. Please refer to “2.2 Wiring Specifications and Circuit Breaker Selection.” The BAT cables must be connected to the device with an O-type terminal with a recommended internal diameter of 8mm. The O-type terminal must clamp the BAT cables tightly to prevent excessive heat caused by excessive contact impedance;

Insert BAT+/BAT- cables as indicated on the label, and fix them with the M8 flange nut. The torque is 20 kgf.cm. As shown in the figure below, “BAT+” represents the battery anode, and “BAT-” the battery cathode.

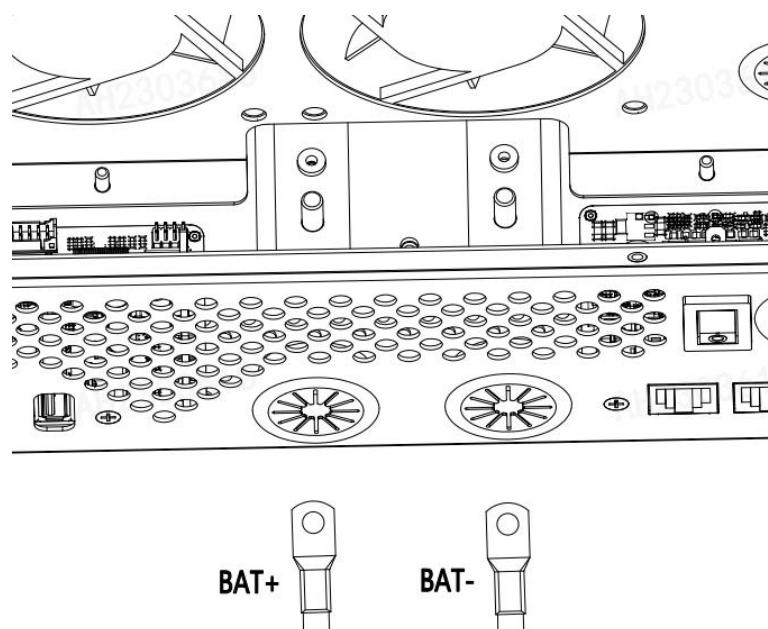

(2) Connect PV cables


Before wiring, please disconnect the external circuit breaker and check whether the cables used are thick enough. Please refer to “2.2 Wiring Specifications and Circuit Breaker Selection.” Insert PV+/PV- cables as indicated on the label, and fix the terminals on the device with a slotted screwdriver. The torque is 12 kgf.cm. As shown in the figure below, “PV+” represents the positive PV input, and “PV-” the negative PV input.

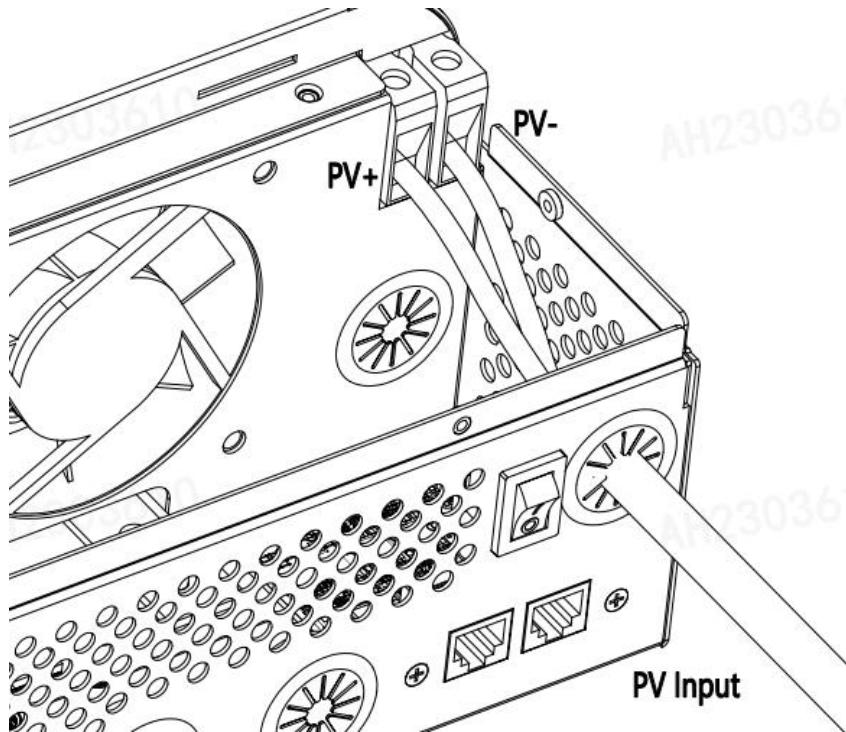

(3) Connect AC input

Before AC input wiring, please disconnect the external circuit breaker and check whether the cables used are thick enough. Please refer to “2.2 Wiring Specifications and Circuit Breaker Selection.”

Insert AC output cables as indicated on the label, and fix the terminals on the device with a slotted screwdriver. The torque is 12 kgf.cm. As shown in the figure below, “L” represents the live wire, “N” the neutral wire, and “PE” the protective earth wire.

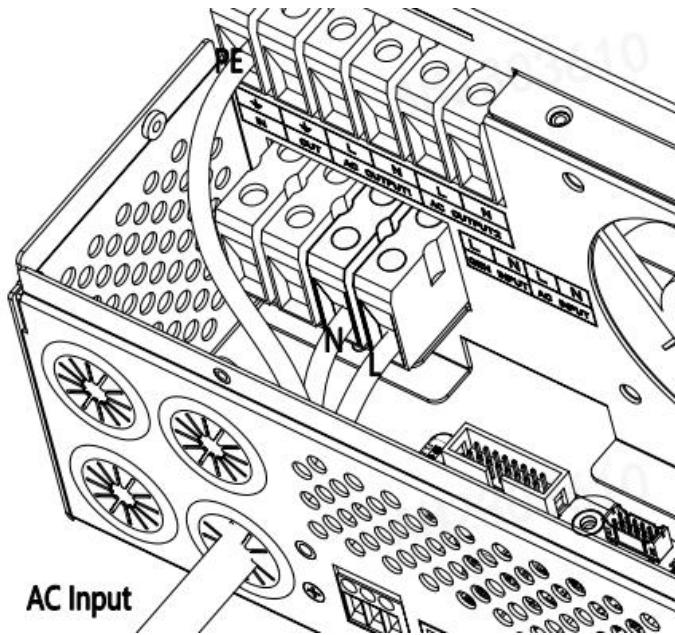


(4) Connect AC output

The inverter has duplex output ports with “Output 1” being the primary load output port and “Output 2” the secondary load output port.

Before AC output wiring, please disconnect the external circuit breaker and check whether the cables used are thick enough. Please refer to “2.2 Wiring Specifications and Circuit Breaker Selection.”

Insert AC output cables as indicated on the label, and fix the terminals on the device with a slotted screwdriver. The torque is 12 kgf.cm. As shown in the figure below, “L” represents the live wire, “N” the neutral wire, and “PE” the protective earth wire. Please note that the two outputs share the same earth wire port.

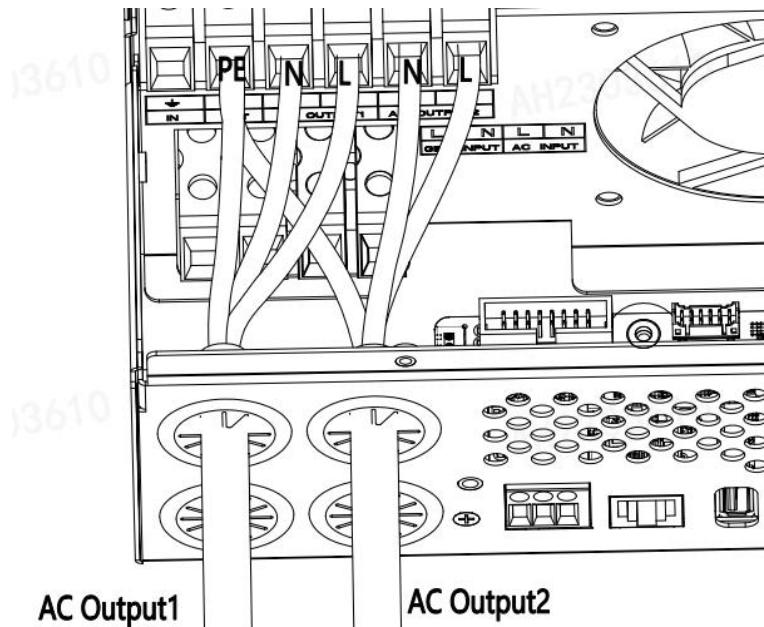


(5) AC input of diesel generator

This port is designed only for the models with the diesel generator input function.


Before wiring inputs, please disconnect the external circuit breaker and check whether the cables used are thick enough. Please refer to “2.2 Wiring Specifications and Circuit Breaker Selection.”

Insert AC output cables as indicated on the label, and fix the terminals on the device with a slotted screwdriver. The torque is 12 kgf.cm. As shown in the figure below, “L” represents the live wire, “N” the neutral wire, and “PE” the protective earth wire. Please note that the diesel generator input and grid AC input share the same earth wire port.

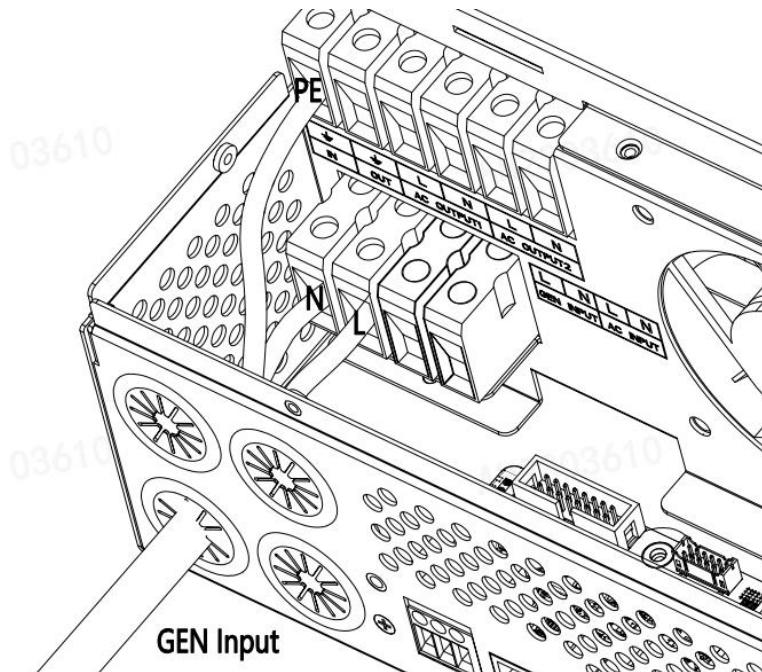


(6) Shell earthing

Please note an additional earthing point on the shell. Clamp the cable with the RNBL5-4 OT terminal and lock it in the position indicated in the figure below. For cable specifications, please refer to the “2.2 Wiring Specifications and Circuit Breaker Selection.”

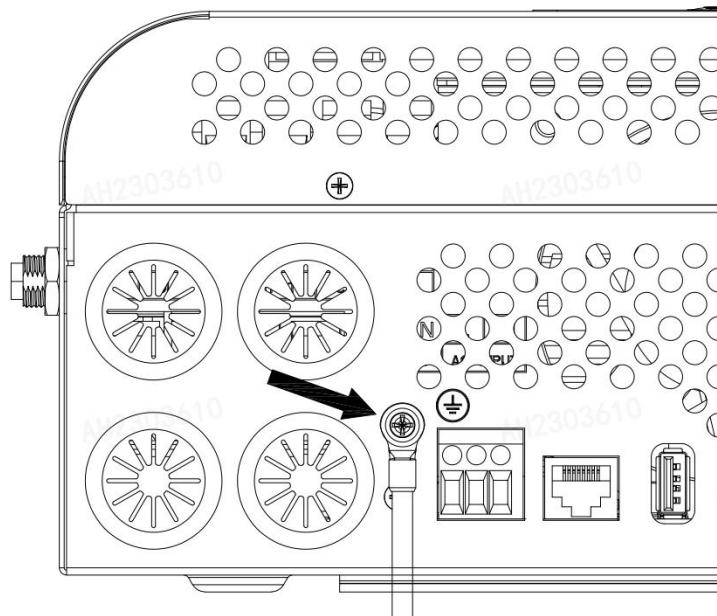

Step 3: Check whether the wiring is correct and firm, especially whether the battery input anode and cathode are correctly connected, whether positive and negative PV inputs are correctly connected, whether the AC input incorrectly connected to the AC output, and whether the AC input is incorrectly connected to the input port of the diesel generator.

Step 4: Use a Phillips screwdriver to reinstall the terminal cover on the device. The torque is 7 kgf.cm.

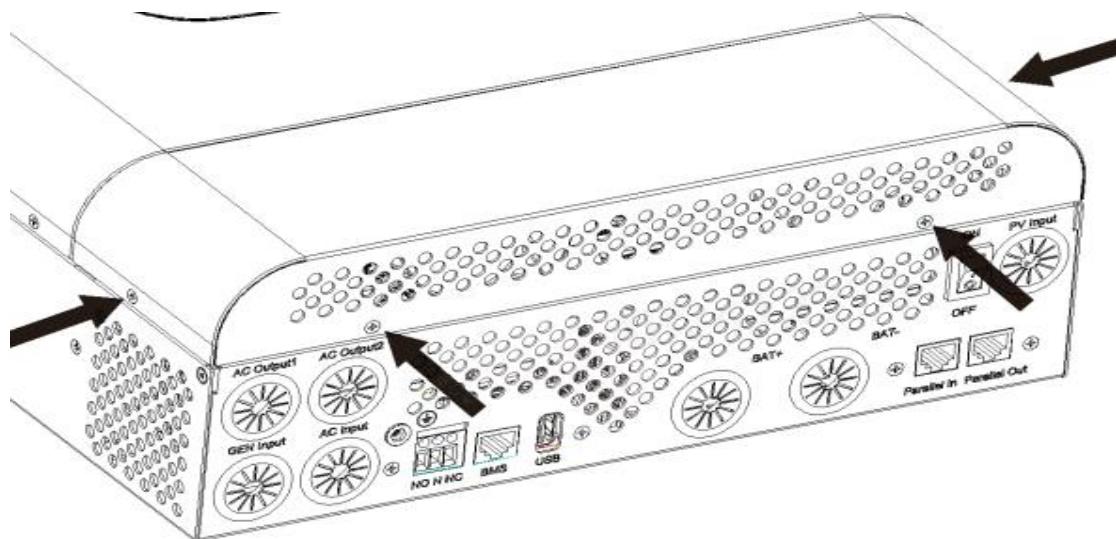

Step 5: Start the inverter

First, close the circuit breaker of the battery, and switch the inverter's rocker switch to the “ON” state. The blinking “AC” indicator indicates the normal operation of the inverter. Then, close the circuit breaker of the PV panel and the grid, and turn on the AC load after the AC output is normal. In this case, the inverter will work normally in accordance with the set mode.

Notes: If energy is supplied to different AC loads, it is recommended to turn on the load with a large impulse current first, and then turn on the load with a small impulse current after the load works stably, in order to avoid the protection action caused by a large transient impulse generated by turning on the load at the same time. If the inverter fails to work normally, and the LCD or indicator displays abnormality, please refer to Section 7 for troubleshooting.

2.4 Parallel Connection and Wiring

2.4.1 Introduction to Parallel Connection

1. The inverter supports up to 9 in parallel connection.
2. It is necessary to ensure that the parallel wiring is correct and firm with a gap of 300 mm between devices reserved in the use of the parallel function.

2.4.2 Guidance and Schematic Diagram of Single-phase Parallel Connection

1. AC IN wiring:

L,N and PE wires of all inverters must be connected to the same wires respectively. Make sure the connection is correct and the wire length and diameter are the same before power-on and startup to avoid abnormal output of the parallel system. Multiple different AC power sources are not allowed to ensure the consistency and uniqueness of the AC source.

2. AC OUT wiring

L,N and PE wires of all inverters must be connected to the same wires respectively. Make sure the connection is correct and the wire length and diameter are the same before power-on and startup to avoid abnormal output of the parallel system.


3. BAT wiring

All inverters must be connected to the same battery, BAT+ must be connected to BAT+, and BAT- must be connected to BAT-. Make sure the connection is correct and the wire length and diameter are the same before power-on and startup to avoid abnormal output of the parallel system.

4. Parallel communication wiring

The parallel communication cable is a network cable, and each device is connected with one input cable and one output cable. The left network interface is used for output and the right network interface for input. The parallel communication

cable shall be inserted in place to avoid system abnormality caused by poor communication.

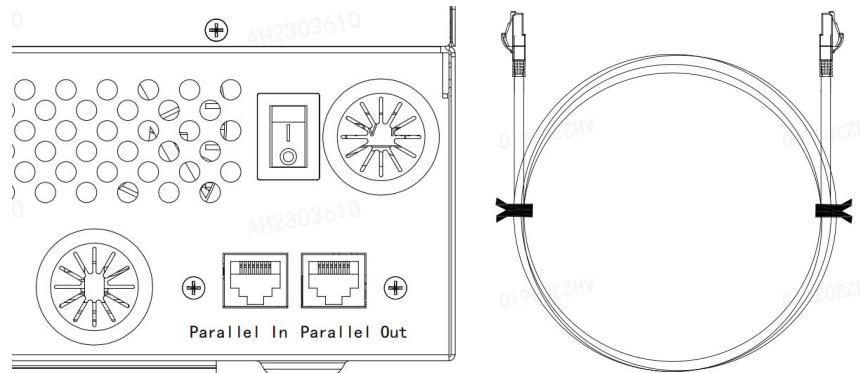


5. Note

Before and after connecting the system, please refer to the system wiring diagram in detail to ensure that all wiring is correct and reliable before power-on. If a new device needs to be connected after the system is properly wired, powered on and operates normally, please disconnect the battery input, PV input, AC input, AC output, and diesel generator input, and re-wire and incorporate into the system after all inverters are power-off detected by a multimeter.


6. Schematic diagram

In case of a single-phase parallel connection of multiple inverters, please conduct wiring according to the schematic diagram below:


(1) Parallel connection of two inverters:

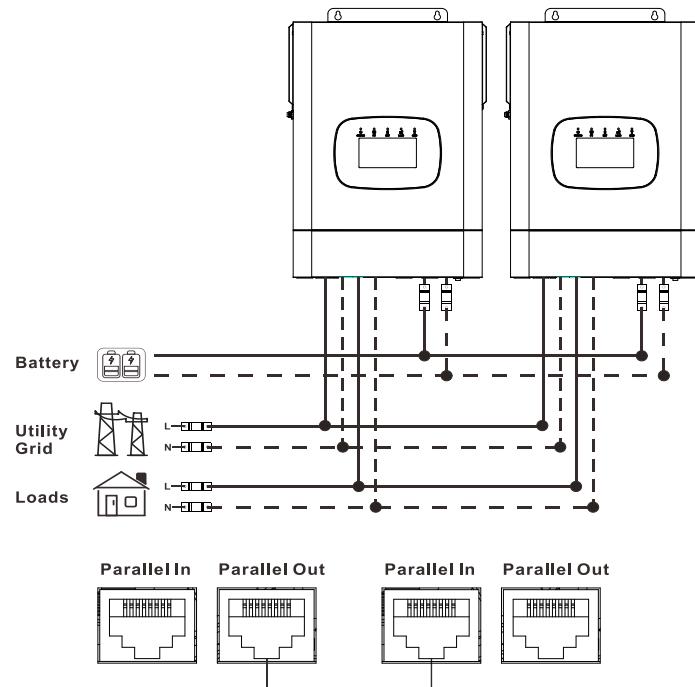


(2) Parallel connection of three inverters:

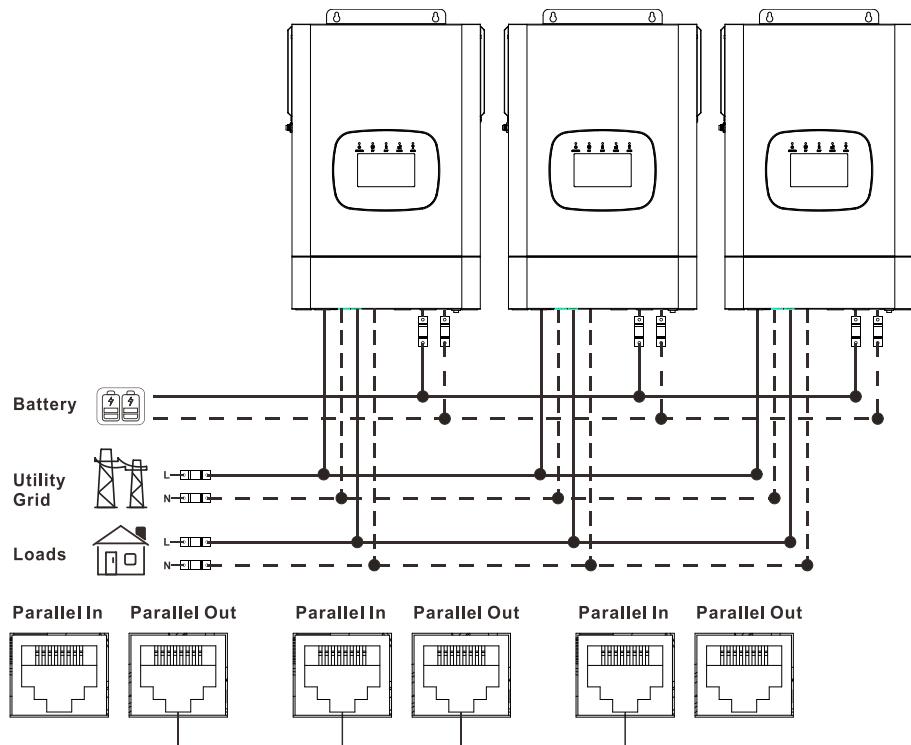


(3) Parallel connection of four inverters:

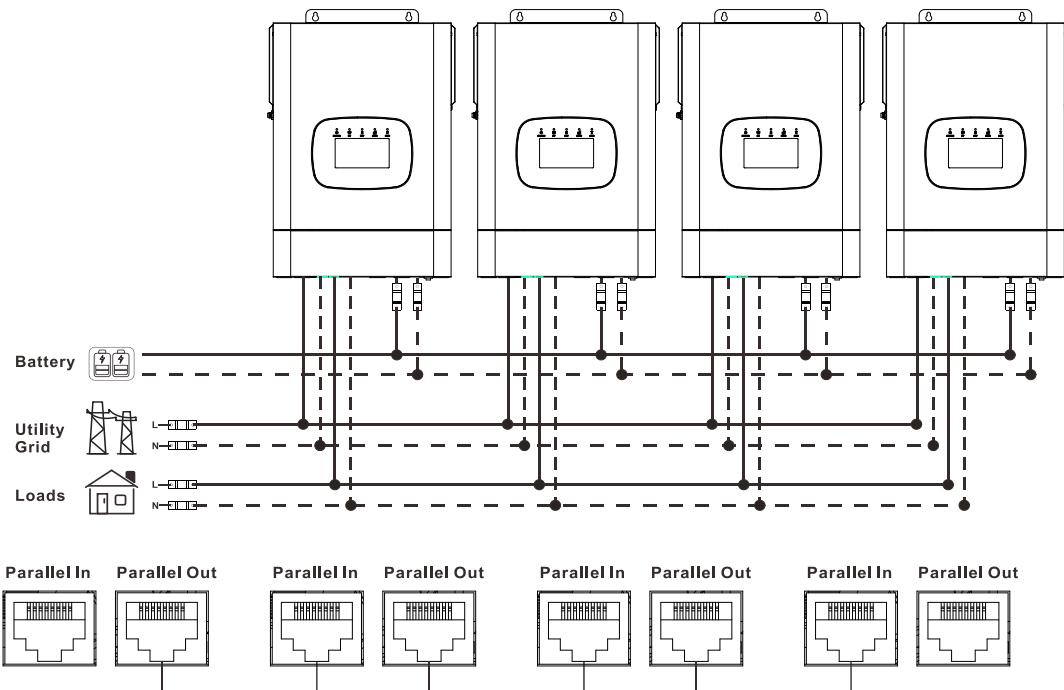

(4) Parallel connection of five inverters:

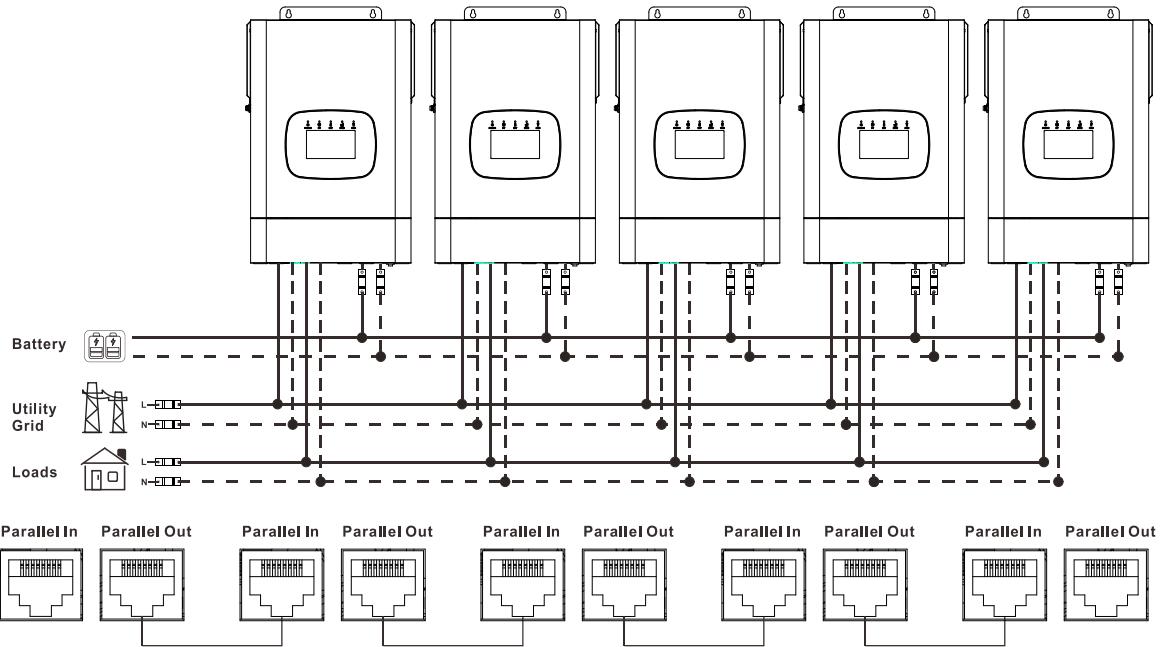


(5) Parallel connection of six inverters:

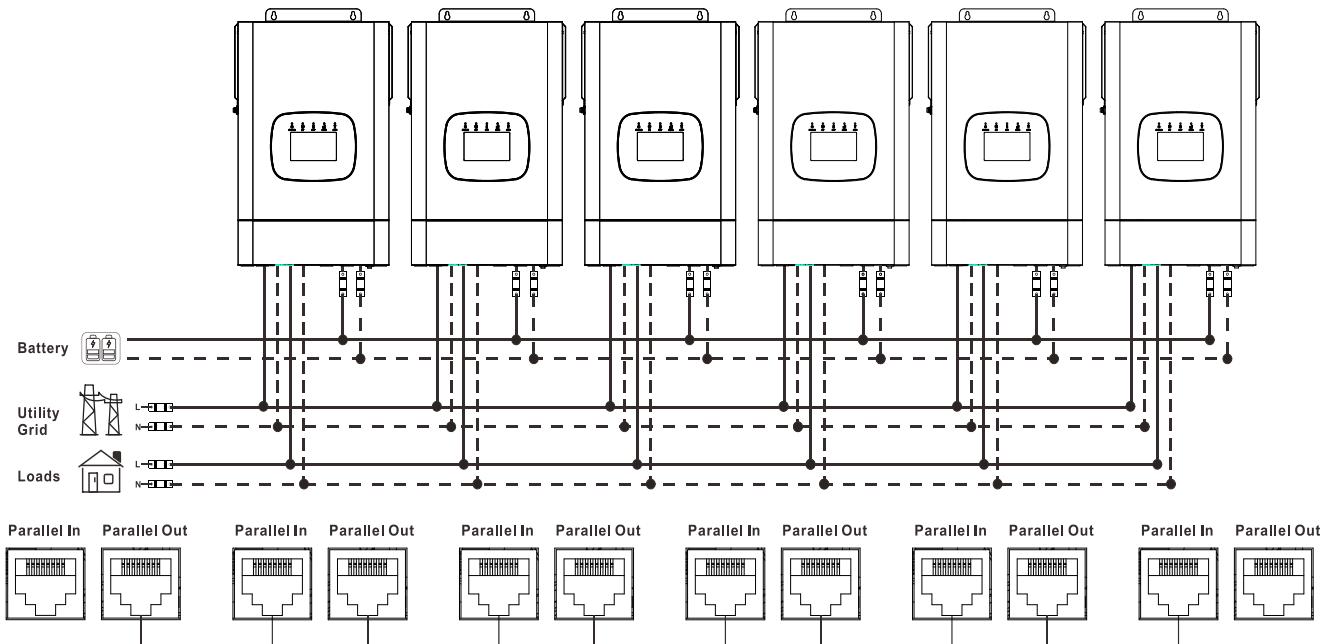

(6) Parallel connection of up to nine inverters, ibid.

2.4.3 Three single-phase parallel parameters setting and display

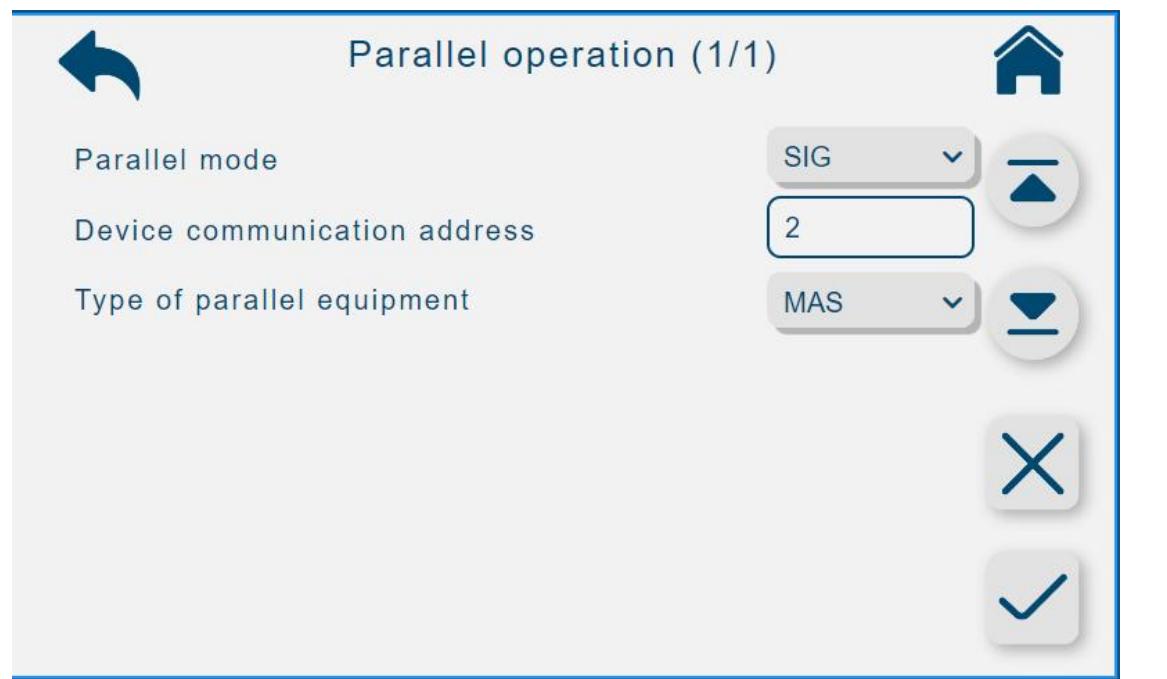

General Settings Interface	
Display Items	Description
Parallel mode	SIG: Settings for the standalone use of the device. PAL: Settings for the single-phase parallel use of the device. 3P1/3P2/3P3: Settings for the three-phase parallel use. All machine screens connected to P1 should be set to “3P1”; All machine screens connected to P2 should be set to “3P2”; All machine screens connected to P3 should be set to “3P3”; Suppose that when the output voltage is 230V AC (the model supporting parallel connection): In this case, the voltage phases between (P1-P2, P1-P3, P2-P3) are different by 120 degrees, and the voltage between the live wire L1 of P1 phase and the live wire L2 of P2 phase is $230 \times 1.732 = 398$ V AC. Likewise, the wire voltage between L1-L3 and L2-L3 is 398V AC; The voltage between L1-N, L2-N and L3-N is 230V AC.
Device communication address	The parallel mode of the device shall be set with a range of 0~9. 0 (Default).
Type of parallel equipment	MAS: Select the current device as the host. If the parallel mode setting is 3P1, this item will be automatically selected as the host type. SAL: Select the current device as the slave.

Description of the closing sequence of each switch for single-phase parallel operation

1. First, turn off the circuit breaker on the battery side of each machine;
2. Close the battery button switch;
3. The parallel operation parameters for Machine One are as follows:

Parallel operation (1/1)

Parallel mode: PAL
Device communication address: 0
Type of parallel equipment: MAS

4. The parallel operation parameters of machine 2 are set as follows:

Parallel operation (1/1)

Parallel mode: PAL
Device communication address: 1
Type of parallel equipment: SAL

5. Set the parameters of machine 3 as follows:

Parallel operation (1/1)

Parallel mode: PAL
Device communication address: 2
Type of parallel equipment: SAL

6. After setting OK, disconnect the battery button switch of the machine.

7. Close the load circuit breaker in sequence, and close the grid circuit breaker.

8. Finally, close the battery button switch of the machine again.

2.4.4 Guidance and Schematic Diagram of Three-phase Parallel Connection

1. AC IN wiring:

N and PE wires of all inverters must be connected to identical wires. L wires of all devices in the same phase shall be connected together, but the L wires of AC input in different phases cannot be connected together. Other precautions shall be consistent with those of the single-phase parallel connection.

2. AC OUT wiring


N and PE wires of all inverters must be connected to identical wires. L wires of all devices in the same phase shall be connected together, but the L wires of AC output in different phases cannot be connected together. Other precautions shall be consistent with those of the single-phase parallel connection.

3. BAT wiring

All inverters must be connected to the same battery. BAT+ must be connected to BAT+, and BAT- must be connected to BAT-. Make sure the connection is correct and the wire length and diameter are the same before power-on and startup to avoid abnormal output of the parallel system.

4. Parallel communication cable

The parallel communication cable is a network cable, and each device is connected with one input cable and one output cable. The left network interface is used for output and the right network interface for input. The parallel communication cable shall be inserted in place to avoid system abnormality caused by poor communication.

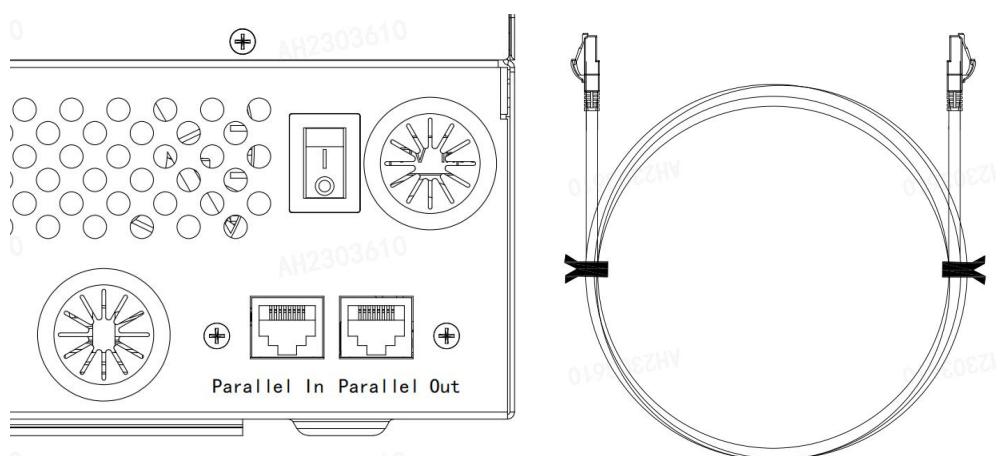

5. Note


Before and after connecting the system, please refer to the system wiring diagram in detail to ensure that all wiring is correct and reliable before power-on. If a new device needs to be connected after the system is properly wired, powered on and operates normally, please disconnect the battery input, PV input, AC input, AC output, and diesel generator input, and re-wire and incorporate into the system after all inverters are power-off detected by a multimeter.

6. Schematic diagram

In case of a three-phase parallel connection of multiple inverters, please conduct wiring according to the schematic diagram below:


(1) A three-phase system with three inverters

1+1+1 system:

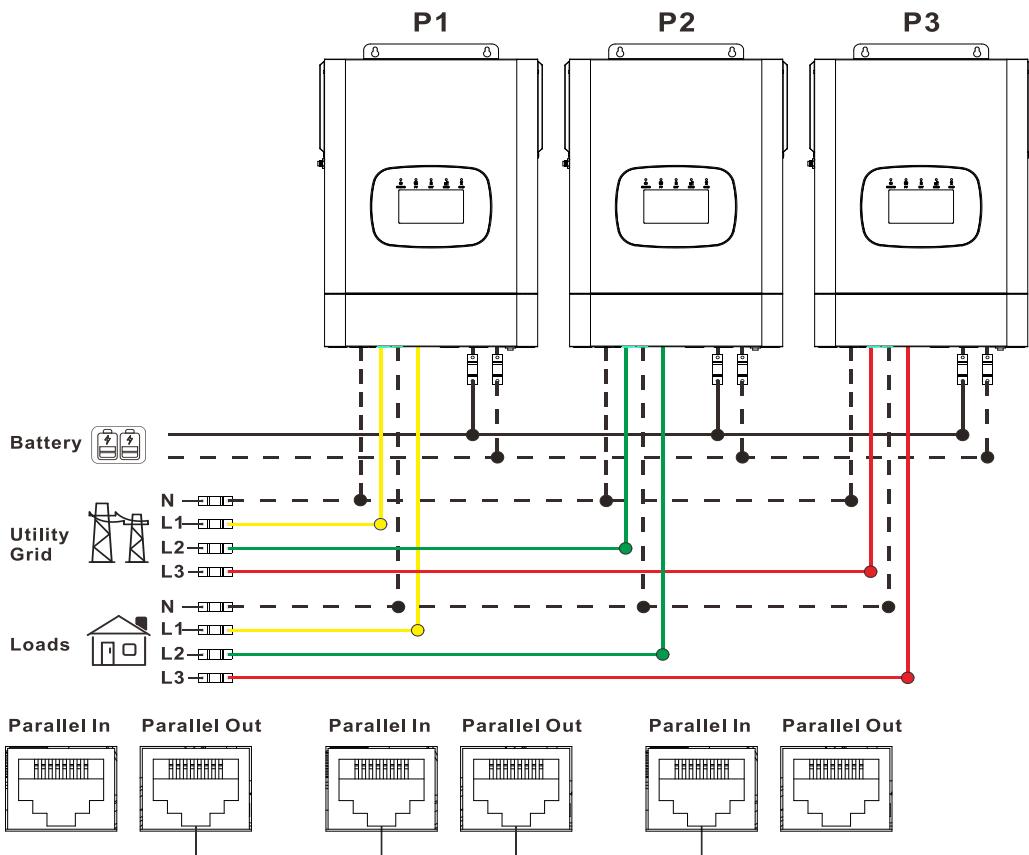


(2) A three-phase system with four inverters

2+1+1 system:

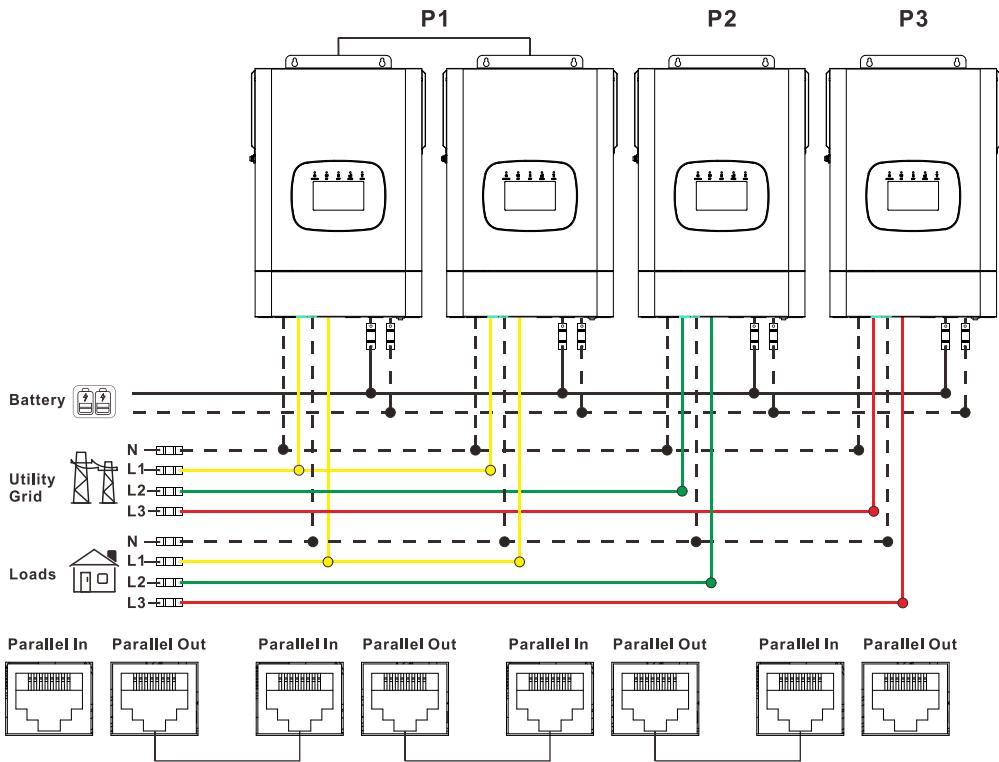


(3)A three-phase system with five inverters

2+2+1 system:

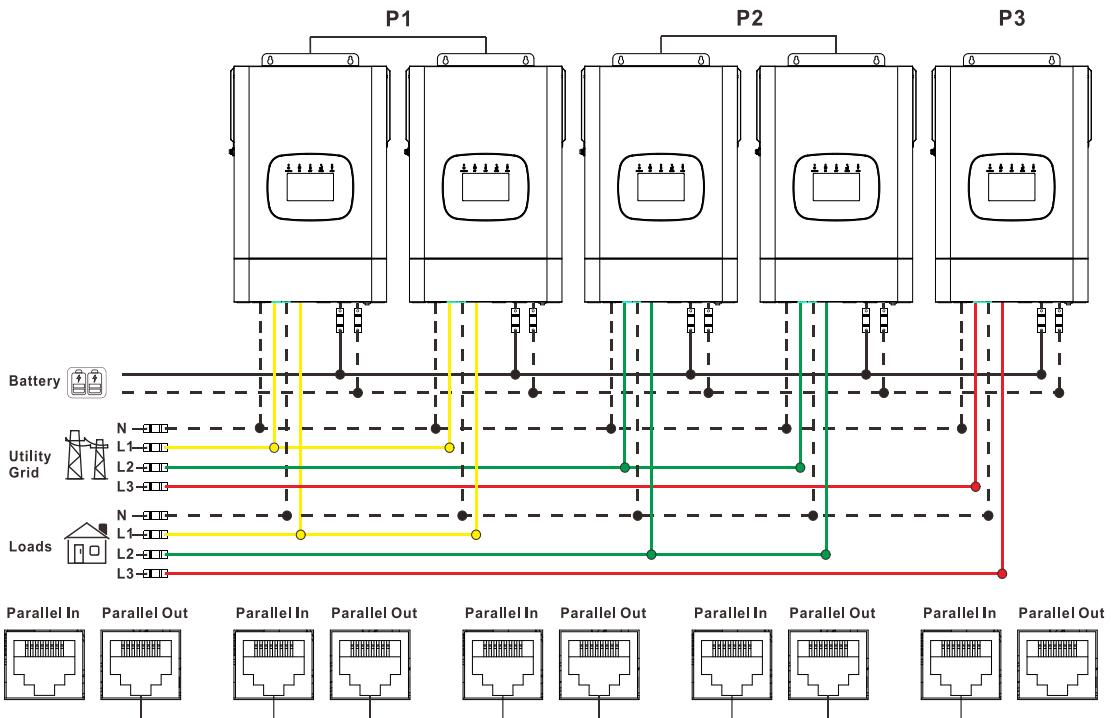


3+1+1 system:

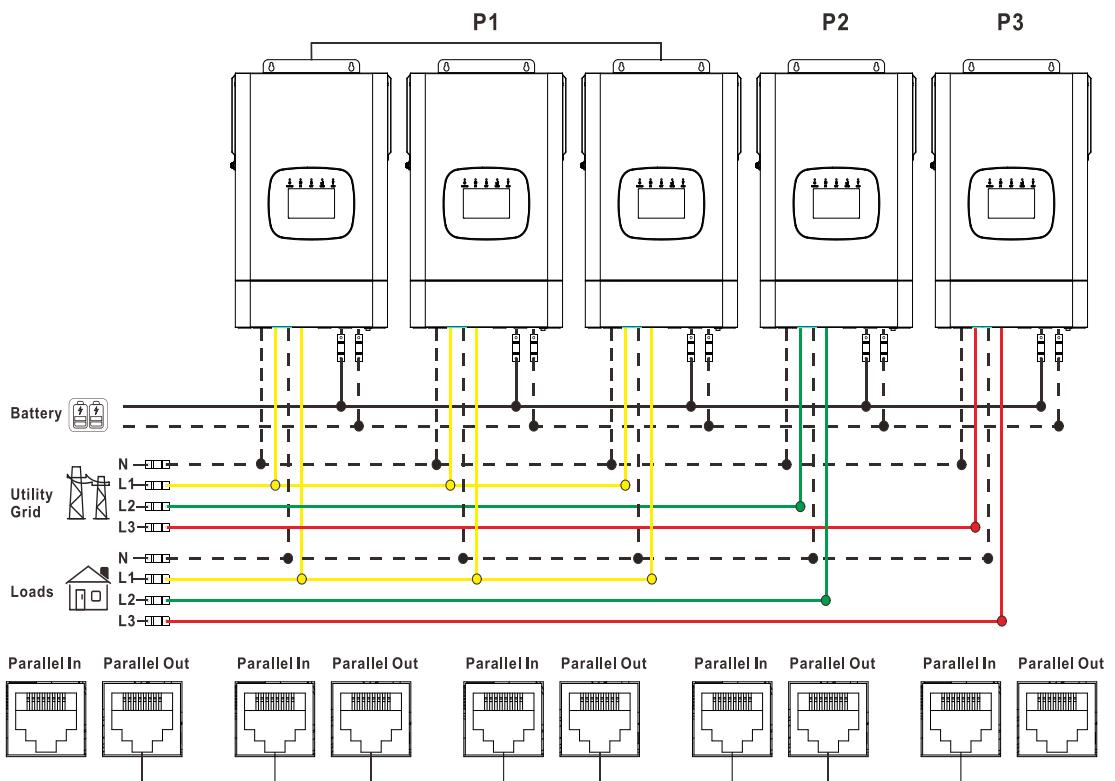


(3) A three-phase system with six inverters


2+2+2 system:

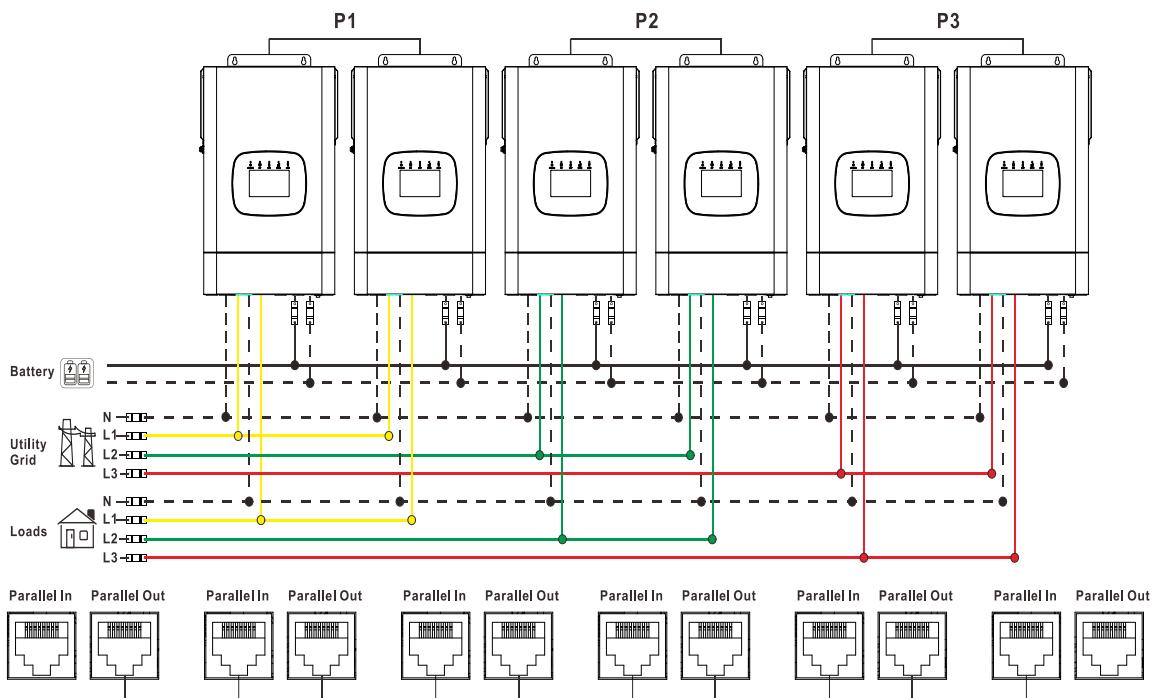

3+2+1 system:

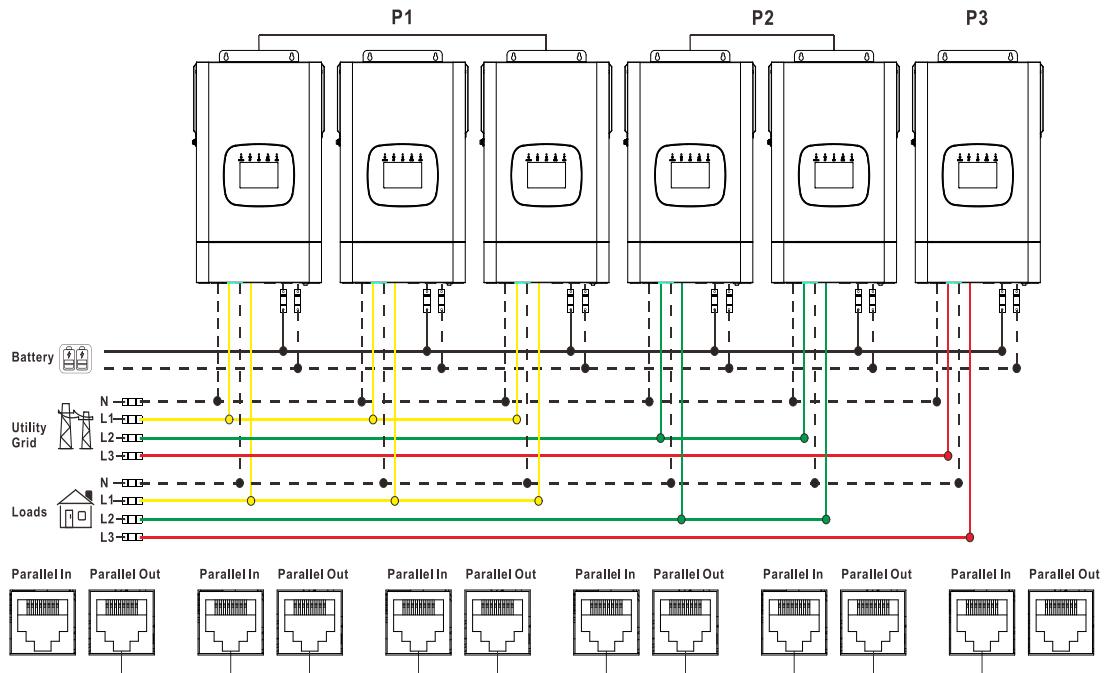

4+1+1 system:

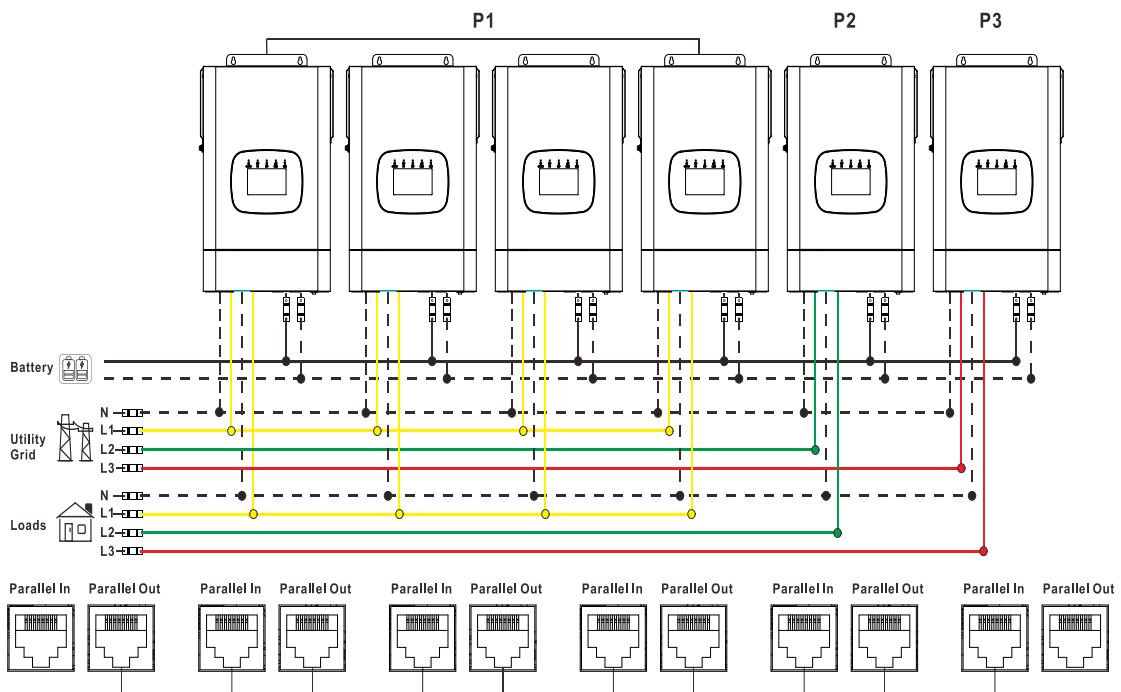

(4) Parallel connection of up to nine inverters, ibid.


Notes:

- (1) It is necessary to check whether the wiring is correct according to the diagram above to avoid problems in the system before the inverter is powered on with its screen on.
- (2) All connections shall be fixed firmly to avoid abnormal system operation caused by disconnected wires.
- (3) When the AC output is wired to the load, the wiring shall be correctly connected according to the requirements for electrical equipment to avoid damages.
- (4) After the system runs and the measured output voltage is correct, please turn on the load circuit breaker for power supply.


2.4.5 Three-phase system parallel parameter setting and example for three inverters

Description of the closing sequence of each switch for single-phase parallel operation


1. First, turn off the circuit breaker on the battery side of each machine;
2. Close the battery button switch;
3. The parallel operation parameters for Machine One are as follows:

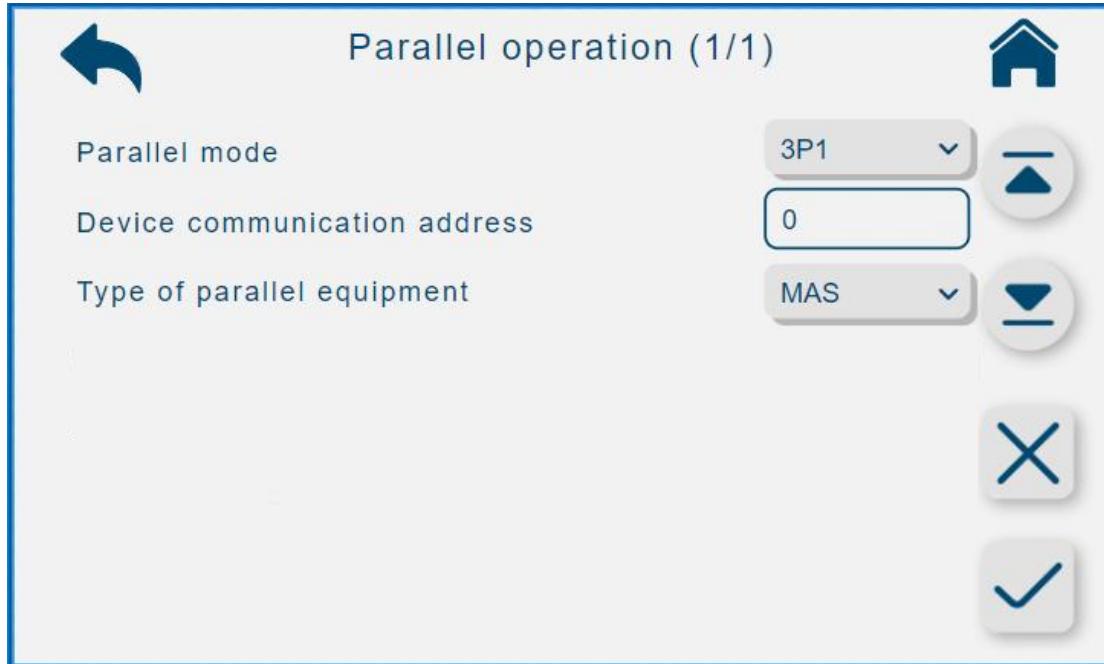

4. The parallel operation parameters of machine 2 are set as follows:

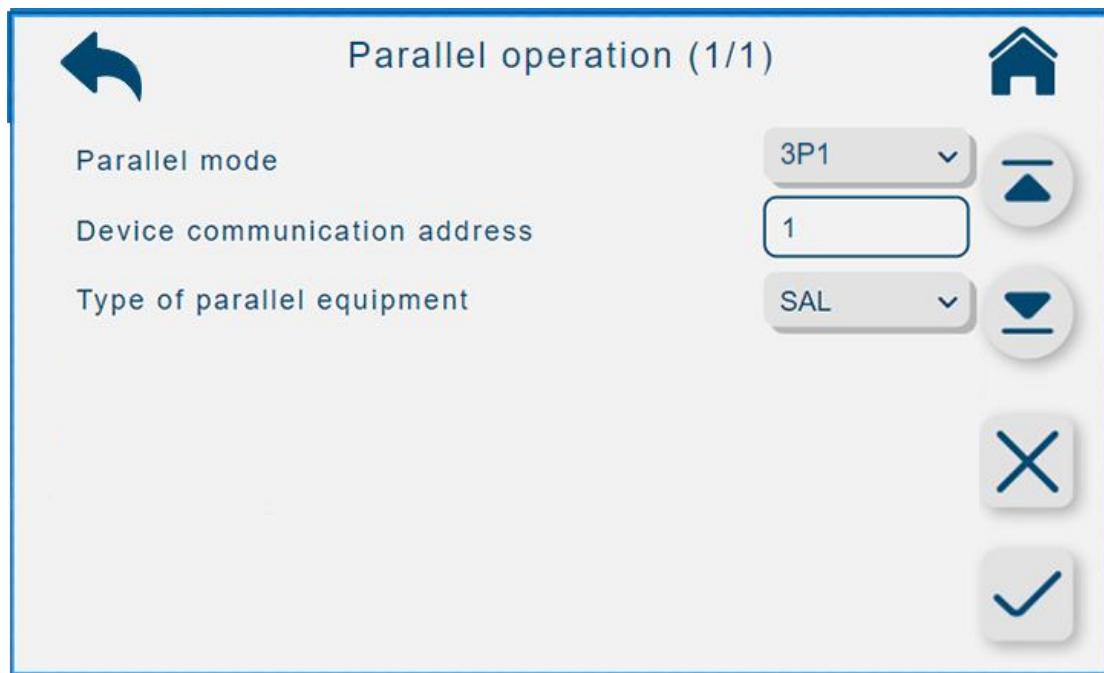

5. Set the parameters of machine 3 as follows:

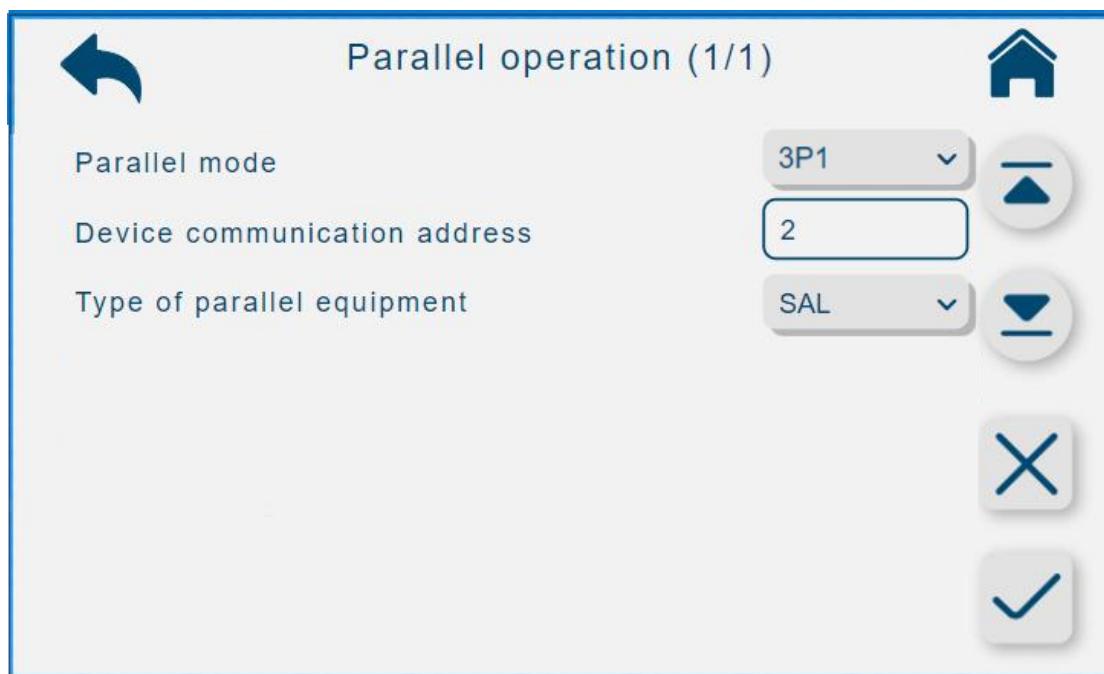

6. After setting OK, disconnect the battery button switch of the machine.
7. Close the load circuit breaker in sequence, and close the grid circuit breaker.
8. Finally, close the battery button switch of the machine again.


3. Working Modes

3.1 Power Supply Modes

- PV power priority mode:

This mode prioritizes PV power for power supply to the load. When the PV power is unavailable, grid and battery will supply power to maximize the use of solar power generation and maintain the battery power. This working mode is suitable for areas with a relatively stable power grid. The priority of power supply realized at the load side is PV power -> Grid -> battery.

With PV energy input:

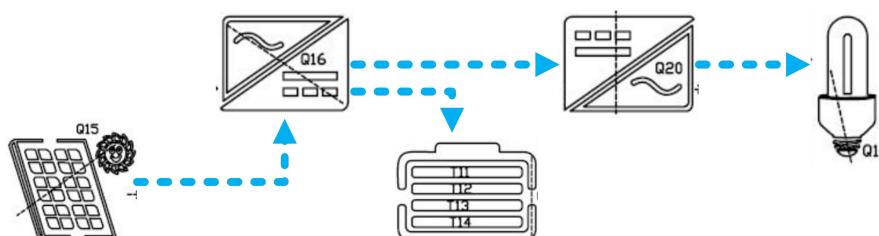

Without PV energy input:




- Grid priority mode

This mode prioritizes grid for power supply to the load. Battery inverter power supply will be applied only when the grid is unavailable, and grid charging and power supply will be applied when the grid is available. If there is PV power, PV power will charge the battery first, and the surplus energy and grid will be output to the load in a complementary way, maximizing the use of solar energy, reducing the use of grid, and keeping the battery power. This mode is suitable for areas with an unstable power grid. The priority of power supply realized at the load side is: Grid -> PV power -> battery.

With grid input:



Without grid input:

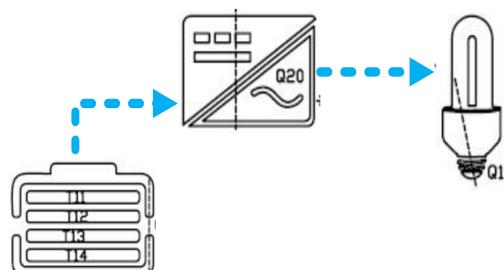


➤ Inverter priority mode:

In this mode, the grid will be applied for power supply only when the battery voltage is lower than the setting point (setting item 05), and the battery discharging mode will be applied when the battery charging voltage is higher than the setting point (setting item 06), so as to repeat the battery charging and discharging cycle. If there is PV power, PV power will maximize the use of solar energy according to PV energy and battery charging and discharging states. This mode is used in areas with a stable power grid. The priority of power supply at the load side is: PV power -> battery -> grid.

When the battery voltage is lower than the set point (05 setting item), switch to grid supply.



The battery voltage is higher than the grid-to-battery voltage, switch to battery inverter.

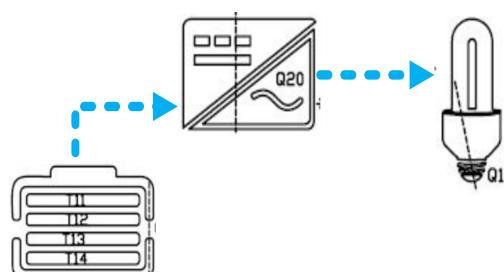


3.2 Charging Modes


- PV charging priority:

PV power gives priority to charging the battery, and the grid charging is only started when PV power does not meet the working conditions. This mode can make full use of solar energy to charge in the daytime and switches to grid at nighttime to keep the battery power, which is used in areas with a relatively stable power grid and relatively expensive electricity price.

With PV energy input:

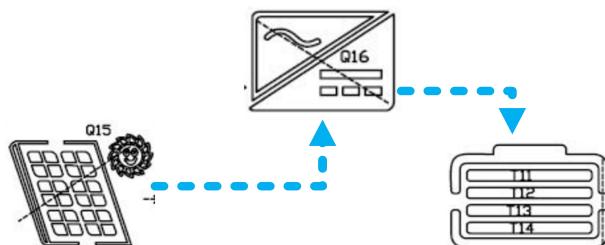


Without PV energy input:

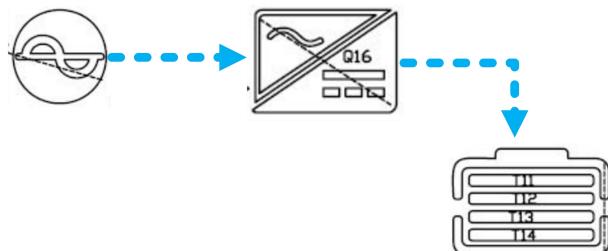


- Hybrid charging:

As for hybrid charging of PV energy and grid, PV energy charging is preferred with grid as a supplement when PV energy is insufficient. This mode mainly meets the requirement for maximum charging power with the fastest charging speed. It is suitable for areas with an unstable power grid, providing sufficient backup power supply.

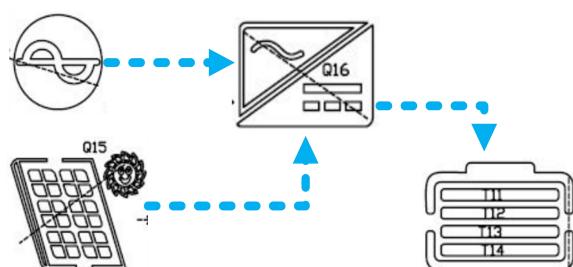


- PV charging mode only

Only the PV energy is used to charge the battery without grid. This mode is the most energy-saving one because the battery power comes from PV solar energy, which is usually used in areas with good lighting conditions.

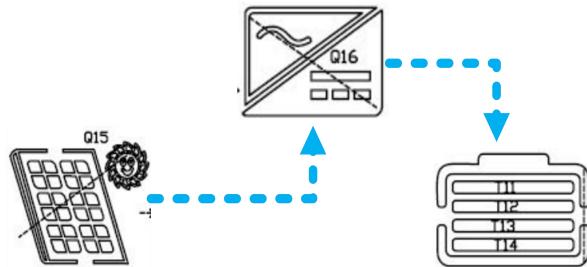

3.3 Battery Charging Parameters

- The charging curve of the lead-acid battery is shown in the figure below:

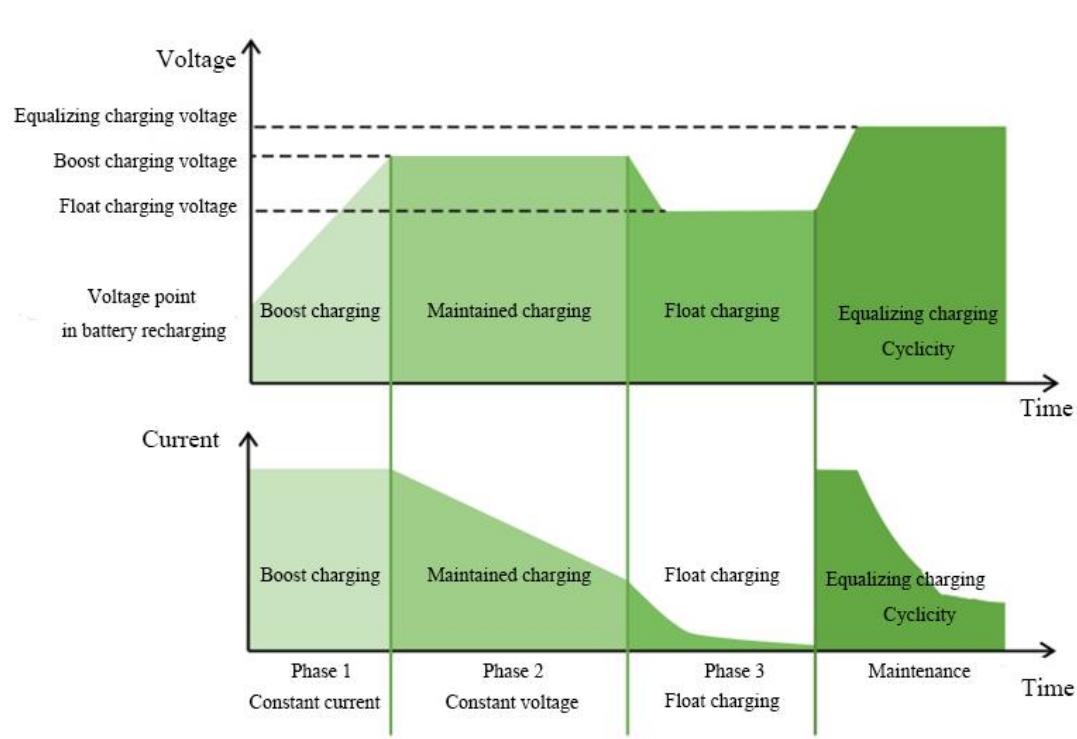


- The charging parameters of the lead-acid battery are shown in the table below:

	Gel lead-acid (GEL)	Sealed lead-acid (SLD)	Flooded lead-acid (FLD)	Customized (USER)
Over-voltage disconnect threshold	60V	60V	60V	36~60V (Adjustable)
Recovery voltage in recharging after fully-charged	52V	52V	52V	52V (Adjustable)

Boost charging voltage	56.8V	57.6V	58.4V	36~60V (Adjustable)
Float charging voltage	55.2V	55.2V	55.2V	36~60V (Adjustable)
Equalizing charging voltage	56.8V	58V	59.2V	36~60V (Adjustable)
Under voltage alarm threshold	44V	44V	44V	36~60V (Adjustable)
Under voltage recovery threshold	Under voltage alarm threshold + 0.8V			
Low-voltage disconnect threshold	42V	42V	42V	36~60V (Adjustable)
Low-voltage recovery	52V	52V	52V	52V (Adjustable)
Discharging limited voltage	40V	40V	40V	36~60V (Adjustable)
Over-discharge (detection) delay time	5s	5s	5s	1~30s (Adjustable)
Equalization duration	-	120 min	120 min	0~600 min (Adjustable)
Equalizing charging interval	-	30 days	30 days	0~250 days (Adjustable)
Boost charging duration	120 min	120 min	120 min	10~600 min (Adjustable)

➤ The charging curve of the lithium battery is shown in the figure below:

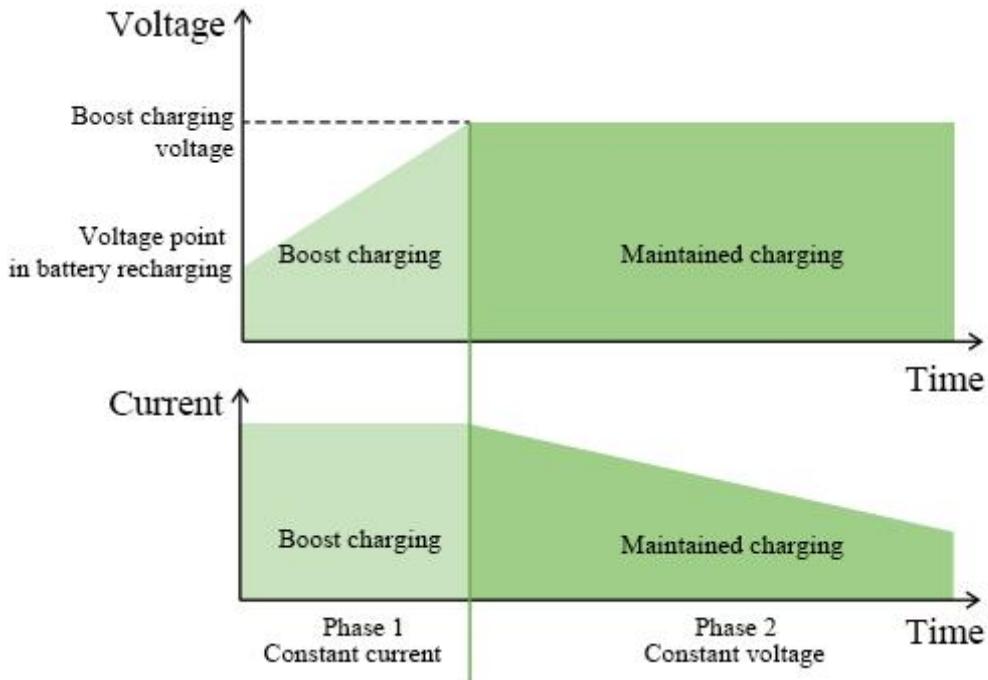

➤ The charging parameters of the lithium battery without BMS communication are shown in the table below:


	LiFePO4 (L14)	LiFePO4 (L15)	LiFePO4 (L16)	Ternary lithium	Ternary lithium
--	---------------	---------------	---------------	-----------------	-----------------

				(N13)	(N14)
Over-voltage disconnect threshold	60V	60V	60V	60V	60V
Recovery voltage in recharging after fully-charged	47.6V	50.4V	53.6V	50.4V	54.8V
Boost charging voltage	49.2V	53.2V	56.8V	53.2V	57.6V
Float charging voltage	49.2	53.2V	56.8V	53.2V	57.6V
Under voltage alarm threshold	43.2V	46.4V	49.6V	43.6V	46.8V
Under voltage recovery threshold	Under voltage alarm threshold + 0.8V				
Low-voltage disconnect threshold	42V	45.6V	48.8V	38.8V	42V
Low-voltage recovery	46V	49.6V	52.8V	46V	49.6V
Discharging limited voltage	40.8V	43.6V	46.4V	36.4V	39.2V
Over-discharge (detection) delay time	30s	30s	30s	30s	30s
Equalization duration	120 min	120 min	120 min	120 min	120 min

4. Operating Instructions for LCD Screen

4.1 Operation and Display Panel

- The operation and display panel include one display screen, five indicators, as shown in the figure below.

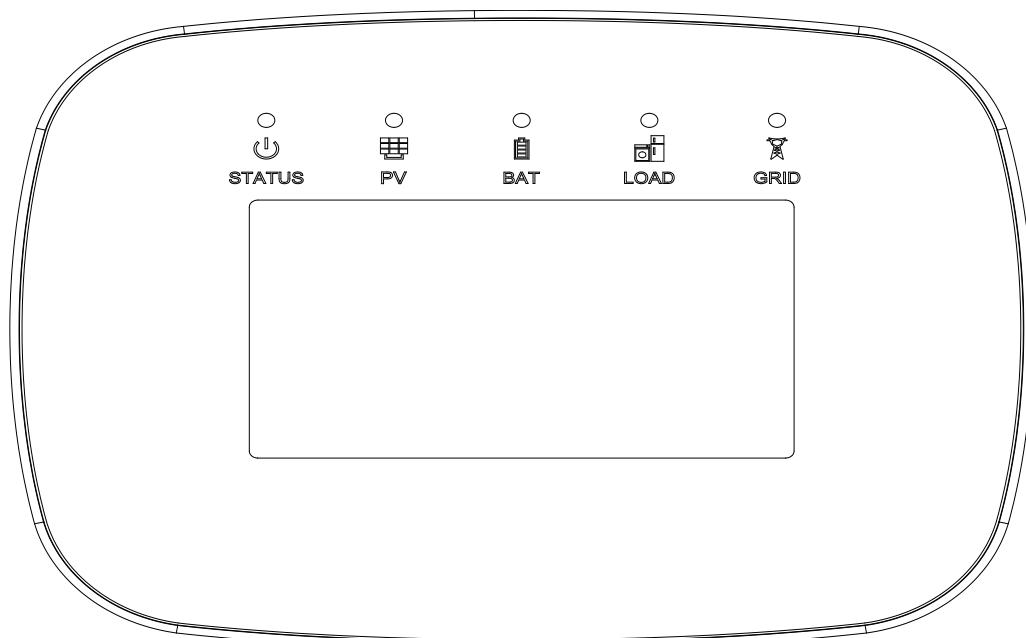

➤ Machine operating status indicator


	No malfunction	malfunction	Alarm	Upgrade
STATUS	green lighting is always on	red lighting is always on	green lighting flashes once every second	green lighting flashes once every 0.5 second

➤ Port status indicator

	Voltage detected at the port	The port has power	Upgrade
PV	green lighting flashes once every second	The green LED light is constantly on	The green LED turns on and off every 0.5 seconds
BAT	green lighting flashes once every second	The green LED light is constantly on	The green LED turns on and off every 0.5 seconds
LOAD	green lighting flashes once every second	The green LED light is constantly on	The green LED turns on and off every 0.5 seconds
GRID	green lighting flashes once every second	The green LED light is constantly on	The green LED turns on and off every 0.5 seconds


Note: All five LEDs flash green together during updates.

➤ Introduction to Display Panel

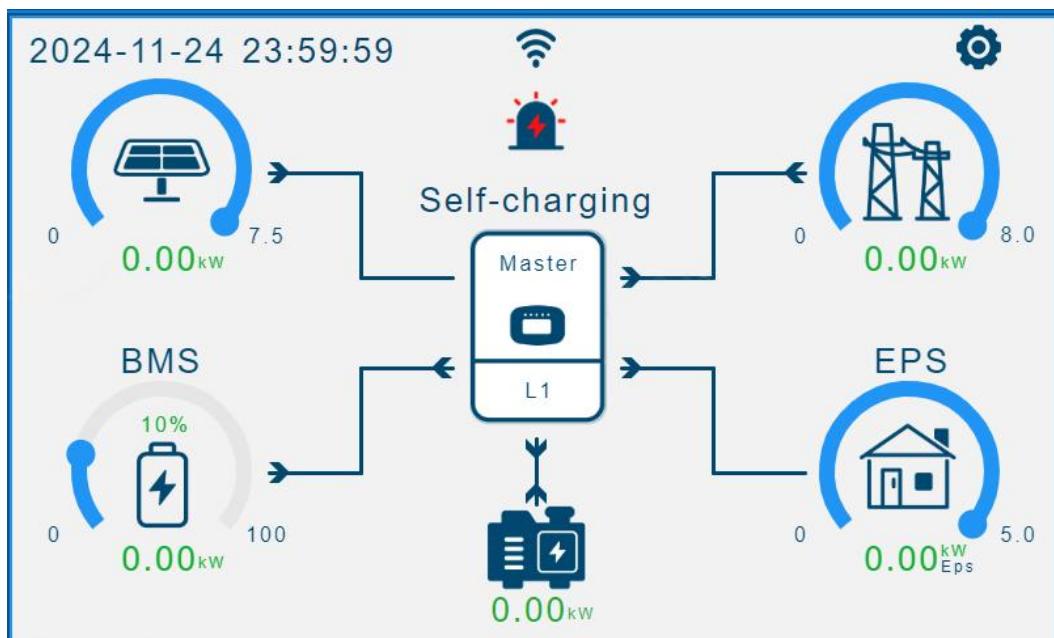

➤ Introduction to the icons on the display panel

 Machine Status Interface

Icon	Description
2024-11-24 23:59:59	System Time
	<p>Standby: The machine is in standby mode</p> <p>On-Grid: The machine operates in this mode when connected to the power grid</p> <p>Off-Grid: The machine operates in this mode when disconnected from the power grid</p> <p>Fault: The machine is in fault state. This indicator appears when a malfunction is detected</p> <p>Flash: The machine is in firmware upgrade mode</p> <p>Bypass: The machine is in grid bypass mode. This indicator appears when there is no PV input and the battery cannot discharge</p> <p>Self-Charging: The machine operates in off-grid mode with insufficient PV power to support loads. In this state, PV energy charges the battery exclusively without powering external loads.</p>
	Displays "Connected" when the data logger is successfully linked to the internet.
	Click this icon to access the PV information interface.
	Click/tap this icon to enter the battery monitoring interface.
	This icon appears only when a generator is connected. Click to access generator monitoring.
	Click this icon to access real-time load monitoring.
	Tap this icon to view real-time grid parameters.
	Tap this icon to access comprehensive device status and configuration settings.

	This icon indicates active device faults. Tap to view detailed alarm information.
	This icon indicates that there is an alarm on the device. Click to view detailed alarm information.
	Tap this icon to enter system configuration menu.
BMS	Lithium Battery Communication Successful
	Displays real-time proportion of PV power in total system output.
	Displays real-time State of Charge (SOC) percentage.
	Displays real-time proportion of grid power in total system energy flow.
	Displays real-time power proportion at the Emergency Power Supply port relative to total system output.
Master	The inverter is in single-phase or three-phase parallel operation mode, and if it displays "Master," it is the host unit. If it shows "Slave," then it is the follower unit.
L 1	The inverter is operating in three-phase parallel mode, and the connected phase line is L1


4.2 Equipment Information Interface

Click



to enter the device information display page, as shown in the


Figure below

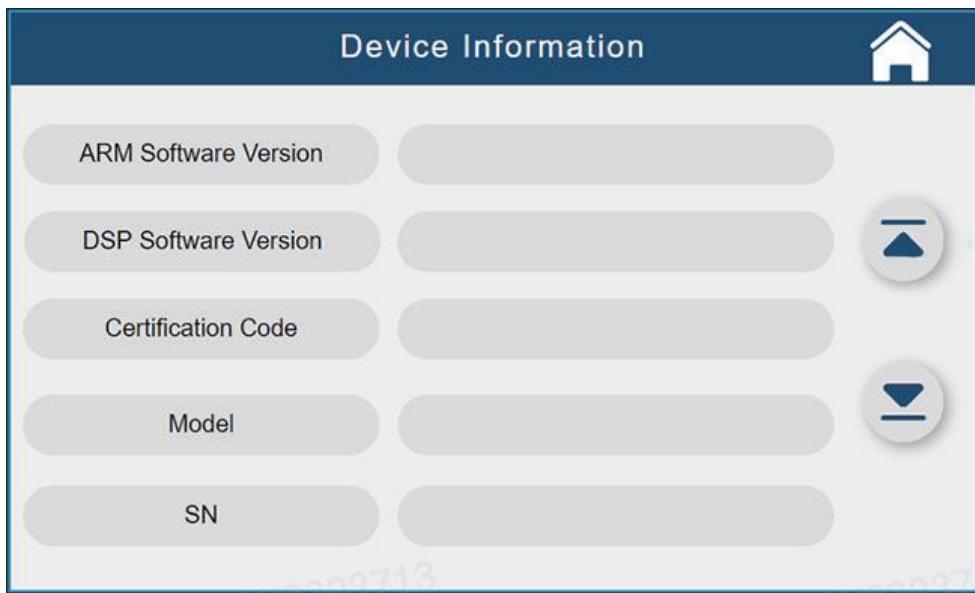

Device Information Interface	
Display Items	Description
ARM Software Version	Communication Software Version
DSP Software Version	Control Software Version
Certification Code	Safety Certification Number
Model	Machine Model Number
SN	Machine Serial Number
	Return to Main Interface
	Page Up/Down

4.3 Fault Alarm Interface


Click  to enter the Fault Alarm Display Page, as shown in the Figure below

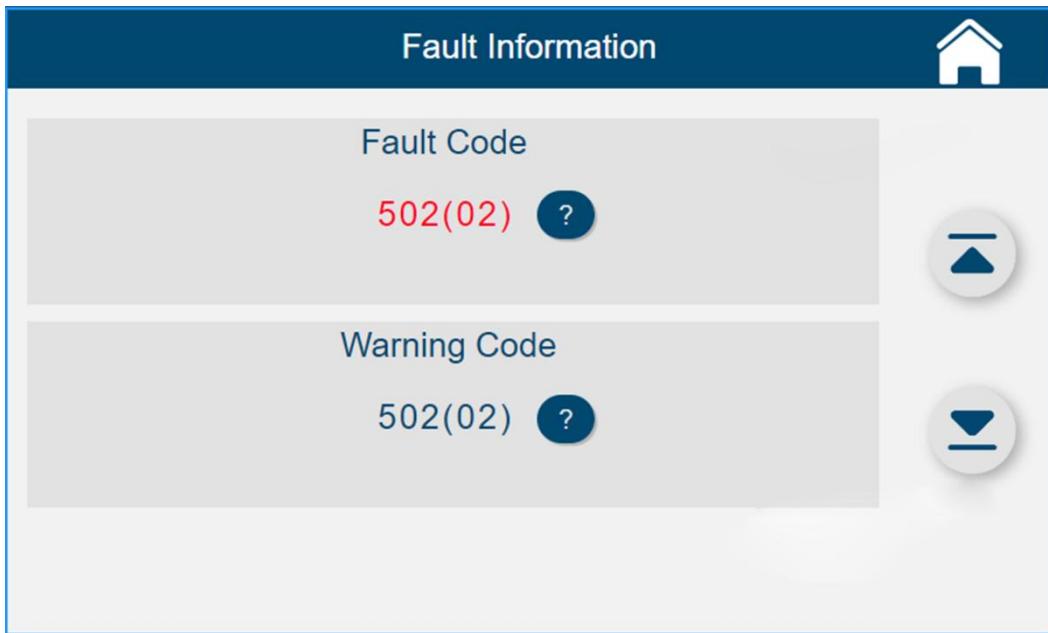

Fault Alarm Information Interface	
Display Items	Description
Fault Code	Machine Error Code
Warning Code	Machine Alarm Code
	Click this icon to view detailed device faults or alarms.
	Return to Main Interface
	Page Up/Down

4.4 PV Parameter Display Page Introduction

Click  to enter the PV Parameter Display Page, as shown in the Figure below

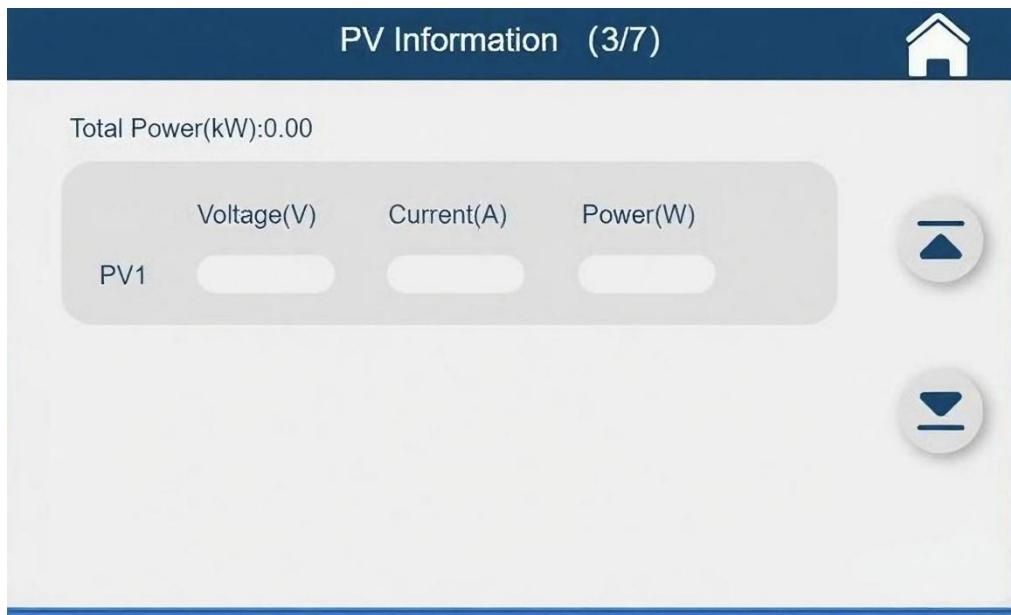


Icon descriptions are as follows:

PV Information Interface	
Display Items	Description
	Return to Main Interface
	Page Up/Down

4.5 Grid Parameter Display Page Introduction


Click  to enter the Grid Parameter Display Page, as shown in the Figure below

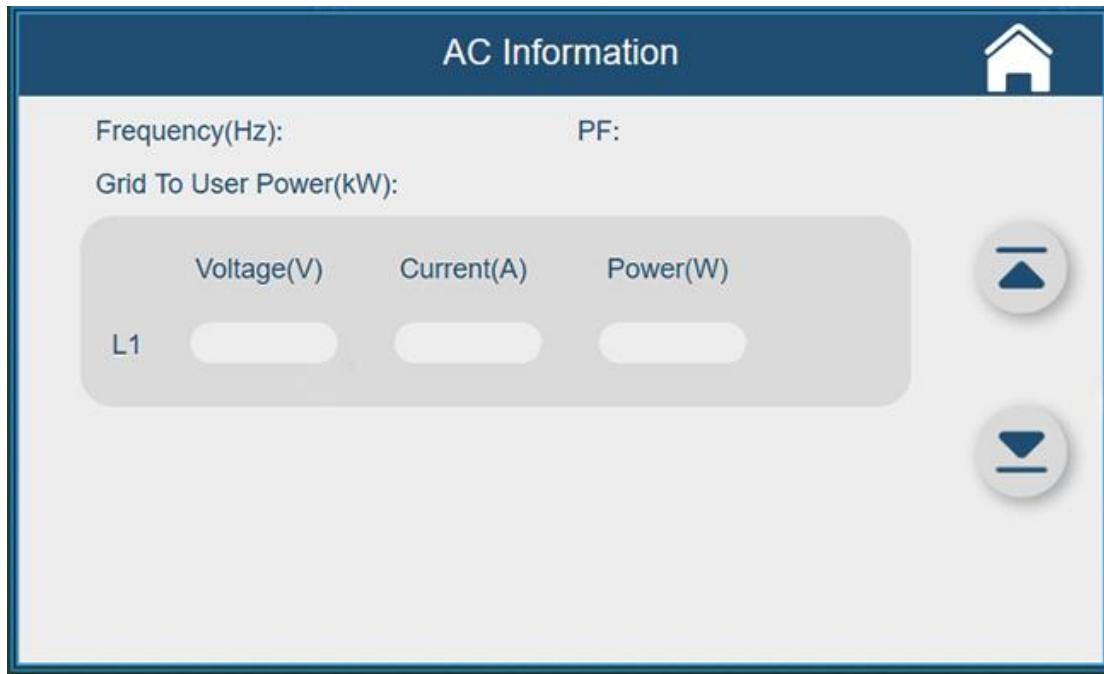

Grid Information Interface	
Display Items	Description
Voltage(V) Current(A)	Voltage and Current Values at the Machine AC Port
Power(W)	Active Power from/to the Grid
Frequency(Hz)	Machine Grid Port Frequency
PF	Power Factor
	Return to Main Interface
	Page Up/Down

4.6 Load Parameter Display Page Introduction


Click to enter the Load Parameter Display Page, as shown in the Figure below

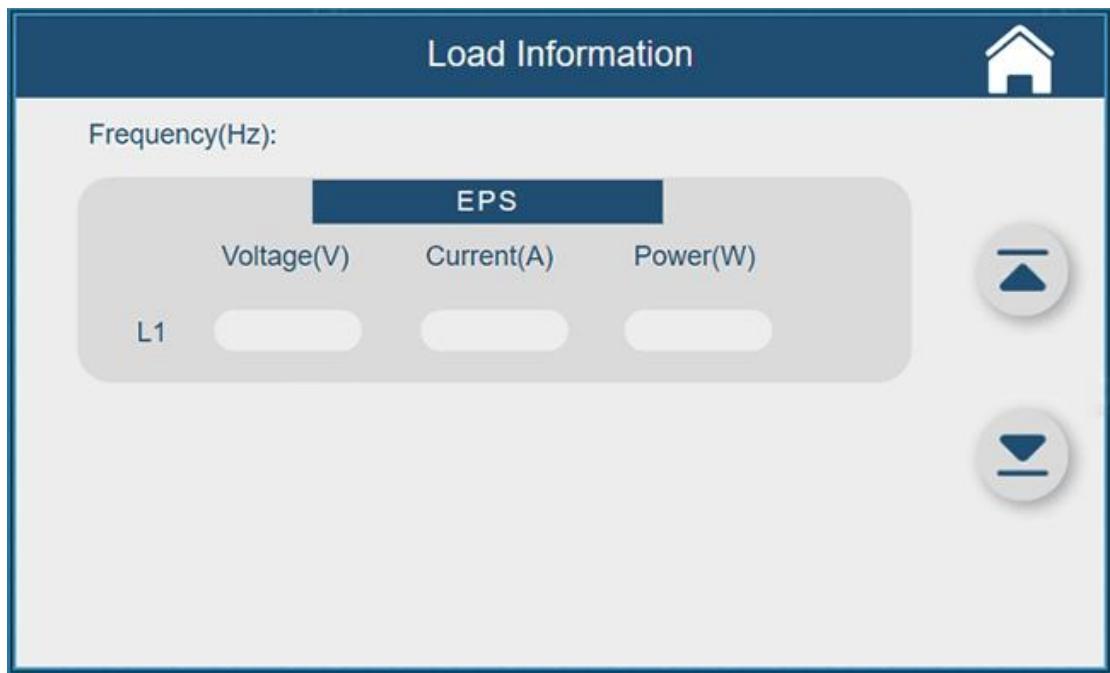

Load Information Interface	
Display Items	Description
Voltage(V) Current(A)	Voltage and Current Values at the Machine Load Port
Power(W)	Active Power Value at the Machine Load Port
Frequency(Hz)	Frequency Value at the Machine Load Port
	Return to Main Interface
 	Page Up/Down

4.7 Battery Parameter Display Page Introduction


Click to enter the Battery Parameter Display Page, as shown in the Figure below

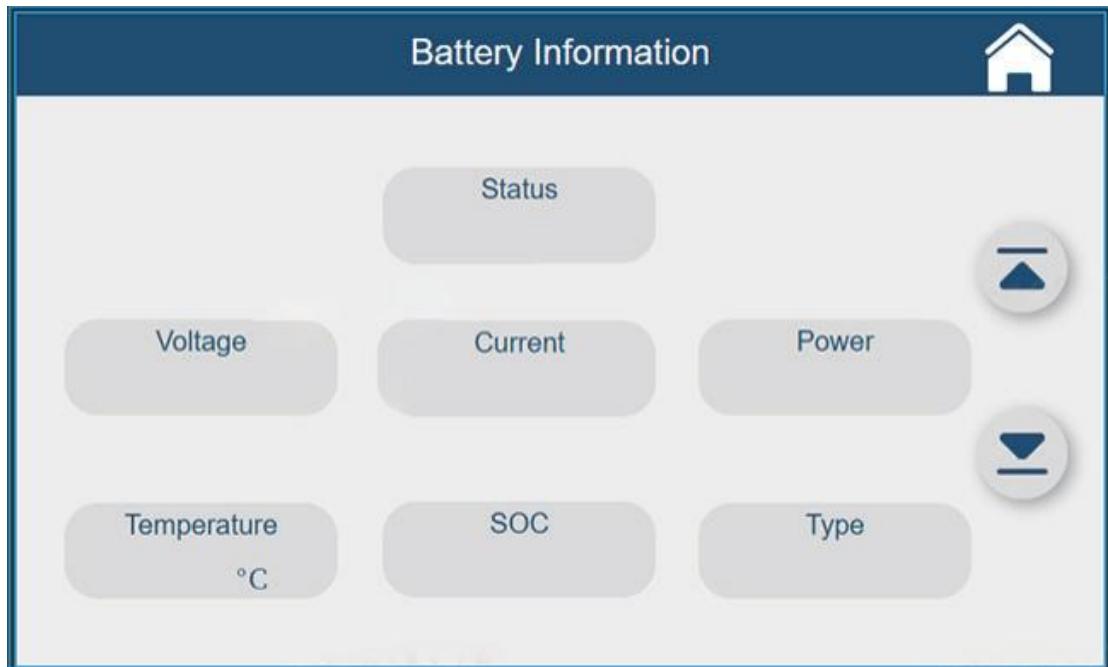

Battery Information Interface	
Display Items	Description
Status	Discharge: Battery is in discharging state. Standby: Battery is in standby/idle state. Charge: Battery is in charging state.
Voltage(V)	Voltage Value at the Machine Battery Port
Current(A)	Current Value at the Machine Battery Port
Power(W)	Power Value at the Machine Battery Port
Temperature(°C)	Battery Temperature
SOC	Battery SOC Value
Type	Battery Type: Lead-Acid/Lithium
	Return to Main Interface
	Page Up/Down

4.8 Generator Information Interface


Click to enter the Generator Information Interface display page, as shown in the Figure below

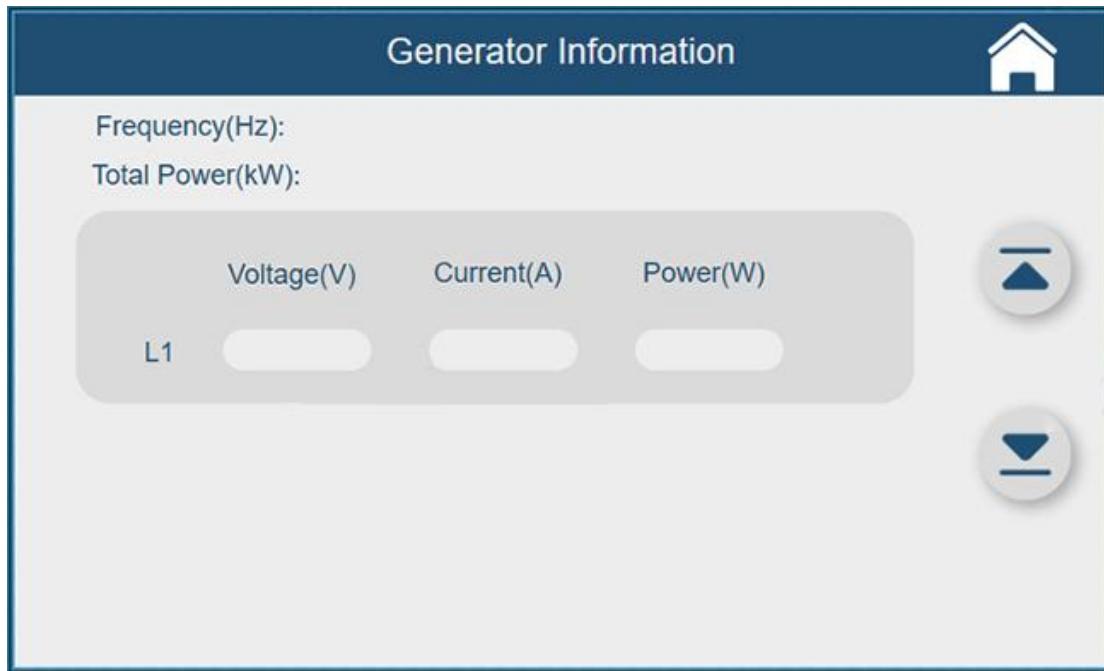

Generator Information Interface	
Display Items	Description
Voltage(V) Current(A)	Voltage and Current Values at the Machine Generator Port
Power(W)	Active Power Value at the Machine Generator Port
Frequency(Hz)	Frequency at the Machine Generator Port
	Return to Main Interface
 	Page Up/Down

4.9 System Parameter Settings Page

Click to enter the System Parameter Settings Page, as shown in the Figure below

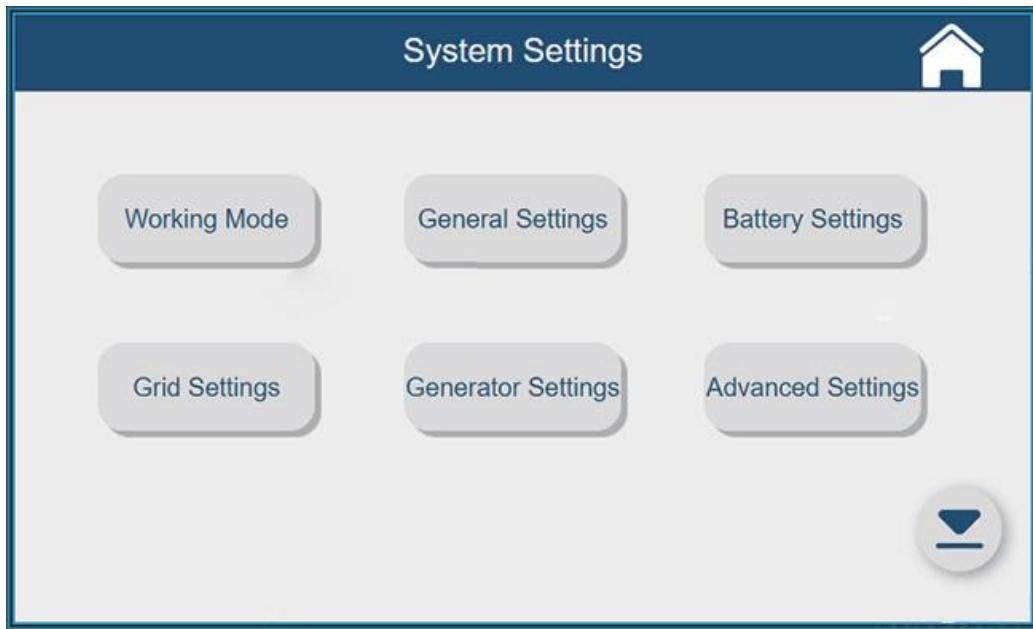

4.9.1 System Operating Mode Settings

Click **Working Mode** to enter the System Operating Mode Settings page, as shown in the Figure below

Working Mode (1/1)


Power supply priority	UTI	<input type="button" value="▼"/>
Charging priority	SNU	<input type="button" value="▼"/>
Grid Feeding enablement	Disable	<input type="button" value="▼"/>
Max Grid-Feeding Power (kW)	0	<input type="button" value="X"/>
Anti reverse mains power setting (W)	40	<input type="button" value="X"/>

Working Mode Setting Interface	
Display Items	Description
Power supply priority	SOL: It indicates the PV power priority mode. When there is no PV input or the battery is lower than the Battery-to-grid voltage, the


	<p>load automatically switches to the grid supply.</p> <p>UTI: It indicates the grid priority mode. It switches to the battery inverter power supply only when there is no grid input.</p> <p>SBU: It indicates the inverter power priority mode. It switches to the grid power supply only when the battery voltage is lower than the Battery-to-grid voltage; it switches to battery discharging and inverter power supply only when the battery is fully charged or higher than the Grid-to-battery voltage</p>
Charging priority	<p>CSO: PV priority charging: The grid will be applied to charge the battery only when the PV power is unavailable.</p> <p>SNU: Hybrid charging of PV and grid power: PV power charging is preferred with grid power as a supplement when PV energy is insufficient. When the PV energy is sufficient, grid stops charging.</p> <p>Note: Only when the grid bypass output is loaded, PV and grid charging can be applied simultaneously. When the inverter is working, the PV power will be applied to charge the battery.</p> <p>OSS: PV charging only, without grid.</p>
Anti reverse mains power setting	Set the input power from the Grid under grid connected conditions, The larger the setting value, the better the anti reverse effect. Range 0-300W.
Grid Feeding enablement	<p>Disable: This function is prohibited.</p> <p>Enable: When the input power priority is in the mains priority mode, the inverter is enabled to feed power to the grid, and excess photovoltaic energy can be fed into the grid after inversion. This item requires password (618) verification to allow setting.</p>
Max Grid-Feeding Power	Set Maximum Allowed Feed-in Power Range: 0-6kW

4.9.2 General Settings

Click  to enter the Basic Settings Page, as shown in the Figure below

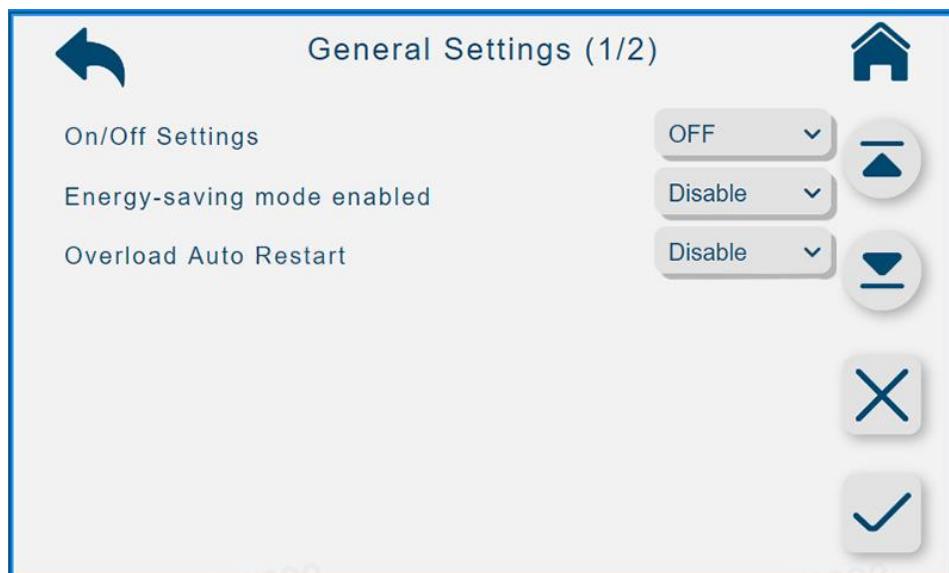


General Settings Interface	
Display Items	Description
On/Off Settings	OFF: Standby mode ON: Normal operating mode
Energy-saving mode enabled	Disable: Energy-saving mode is prohibited Enable: After the mode is enabled, if the inverter output load is empty or less than 50W, turn off the output after the inverter output is delayed for a period. When the load is greater than 50W, the inverter starts automatically.
Overload Auto Restart	Disable: When overload auto restart is prohibited, if overload occurs, turn off the output, and the device will never restart. Enable: When overload auto restart is enabled, if overload occurs, turn off the output, and the first restoration takes 30 seconds, the second restoration takes 30 seconds, and the third restoration takes 1 hour.

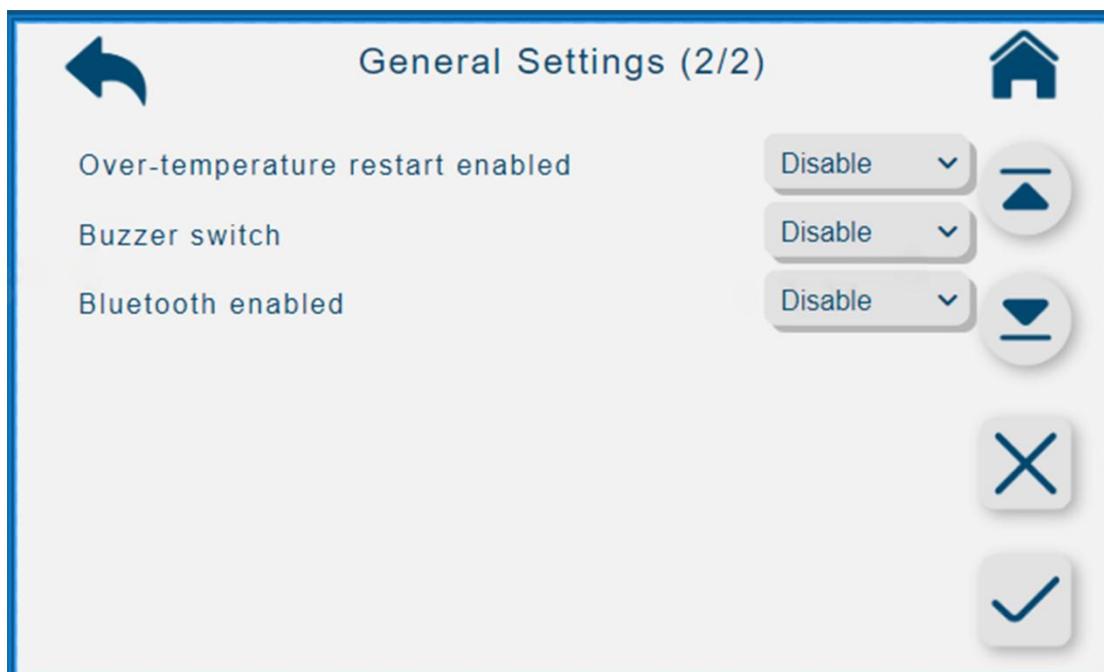


General Settings Interface	
Display Items	Description
Over-temperature restart enabled	Disable: When over-temperature auto restart is prohibited, if over-temperature occurs, turn off the output machine and the inverter output will not restart. Enable: When over-temperature auto restart is enabled, if over-temperature occurs, turn off the output, and the AC inverter output will be restarted after the temperature drops.
Buzzer switch	Disable: The buzzer alarm is prohibited with a mute mode. Enable: The buzzer alarm is enabled.
Bluetooth enabled	Disable: This function is prohibited. Enable: Turn on Bluetooth.

 4.9.3 Battery Parameter Settings

Click  to enter the Battery Parameter Settings, as shown in the Figure below

1. Battery Settings:

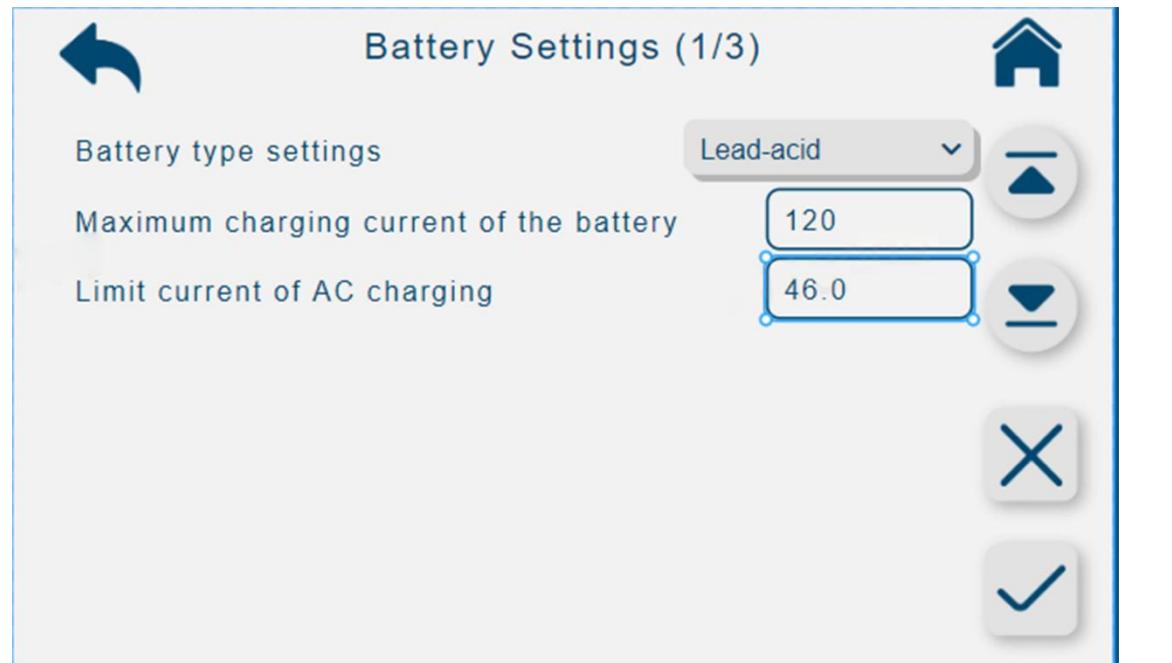

The screenshot shows the 'Battery Settings (1/3)' interface. At the top, there is a back arrow, a house icon, and a 'Battery Settings (1/3)' title. Below the title, there are three settings: 'Battery type settings' (set to 'Lead-acid'), 'Maximum charging current of the battery' (set to '120'), and 'Limit current of AC charging' (set to '46.0'). Each setting has an up and down arrow button to its right. At the bottom right are a red 'X' button and a green checkmark button.

Battery Settings Interface	
Display Items	Description
Battery type settings	Lead-acid: Lead-acid battery. Lithium: Lithium battery. Lithium No Com: Uncommunicative lithium batteries.
Maximum charging current of the battery	The default maximum charging current of the battery is 60A, with a setting range of 1~120A . 20A (Default).
Limit current of AC charging	The default limited current is 60A for AC battery charging, with a setting range of 1~100A . 60A (Default).

2. Lead-Acid Battery Settings Interface:


Battery Settings (1/3)

Battery type settings

Lead-acid

-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
+
X
V
-
<span style="border: 1px solid #ccc; padding: 2px 5px; margin-right:


	battery activation function. Under this mode, lithium battery charging and discharging are based on defined parameters. Users need to input charging and discharging parameters corresponding with battery information, otherwise the battery will be damaged.
Battery charging CV voltage	The default CV voltage is 56.8V, with a setting range of 48~59.2V. It is valid when the battery type is customized battery and lithium battery. 56.8V (Default).
Maximum boost charging duration	The default maximum boost charging duration is 120 min, with a setting range of 5~900 min. It refers to the maximum charging duration when the voltage reaches the voltage set in parameter [11] during constant-voltage charging. 120min (Default).
Float charging voltage	The default float charging voltage is 55.2V, with a setting range of 48~58.4V. 55.2V (Default).
Battery under voltage alarm threshold	The default under voltage alarm threshold of the battery is 44V, with a setting range of 40~50V. When the load is less than 50% of the rated power, if the battery voltage falls below this threshold, an under-voltage alarm will be triggered. When the load exceeds 50% of the rated power, if the low-voltage alarm point is 2V lower than the set value, and the inverter output will not be shut down. 44V (Default).

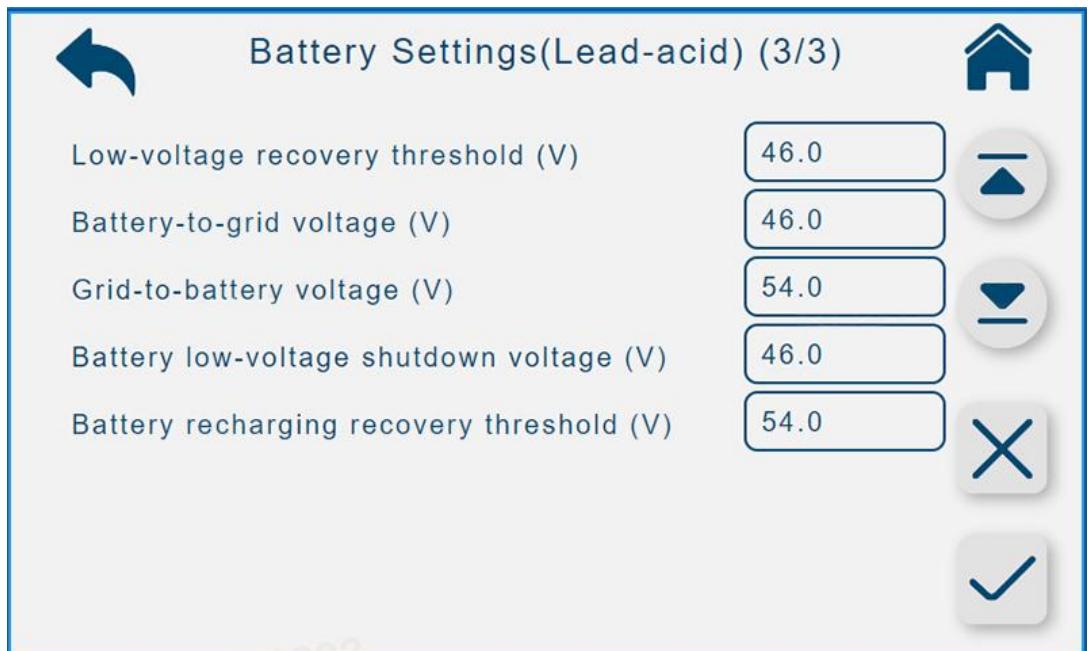


Lead-Acid Battery Settings Interface	
Display Items	Description
Low-voltage recovery threshold	The default recovery threshold for low-voltage disconnection battery voltage is 52V, with a setting range of 50~58V. When the inverter output is disconnected due to the battery's low voltage,

	the battery inverter AC output can be recovered when the battery voltage is higher than this set value. 52V (Default).
Battery recharging recovery threshold	The default battery recharging recovery threshold is 52V, with a setting range of 50~56V. After the battery is fully charged, the inverter charging stops, and the battery charging can be recovered when the battery voltage is lower than this voltage value. 52V (Default).
Battery low-voltage shutdown voltage	The default battery low-voltage shutdown voltage is 40V, with a setting range of 40~48V. When the battery voltage is lower than the threshold and the parameter 42 is triggered, the inverter output will be shut down. It is valid when the battery type is customized batteries and lithium batteries. 40V (Default).
Battery-to-grid voltage	The default battery-to-grid supply voltage is 46V, with a setting range of 44V~52V. When Power supply priority is SBU, the battery voltage is lower than the set value, and the output is switched from the inverter to the grid supply. This setting item is only applicable to lead-acid batteries. For BMS lithium battery settings, please refer to On-grid discharge cutoff SOC 46V (Default)
Grid-to-battery voltage	The default grid-to-battery voltage is 54V, with a setting range of 48~58V. When Power supply priority is SBU, the battery voltage is higher than the set value, and the output is switched from the grid to the inverter power supply. This setting item is only applicable to lead-acid batteries. For BMS lithium battery settings, please refer to On-grid end-of-discharge recovery SOC 54V (Default)

3. Lithium Battery Settings Interface:

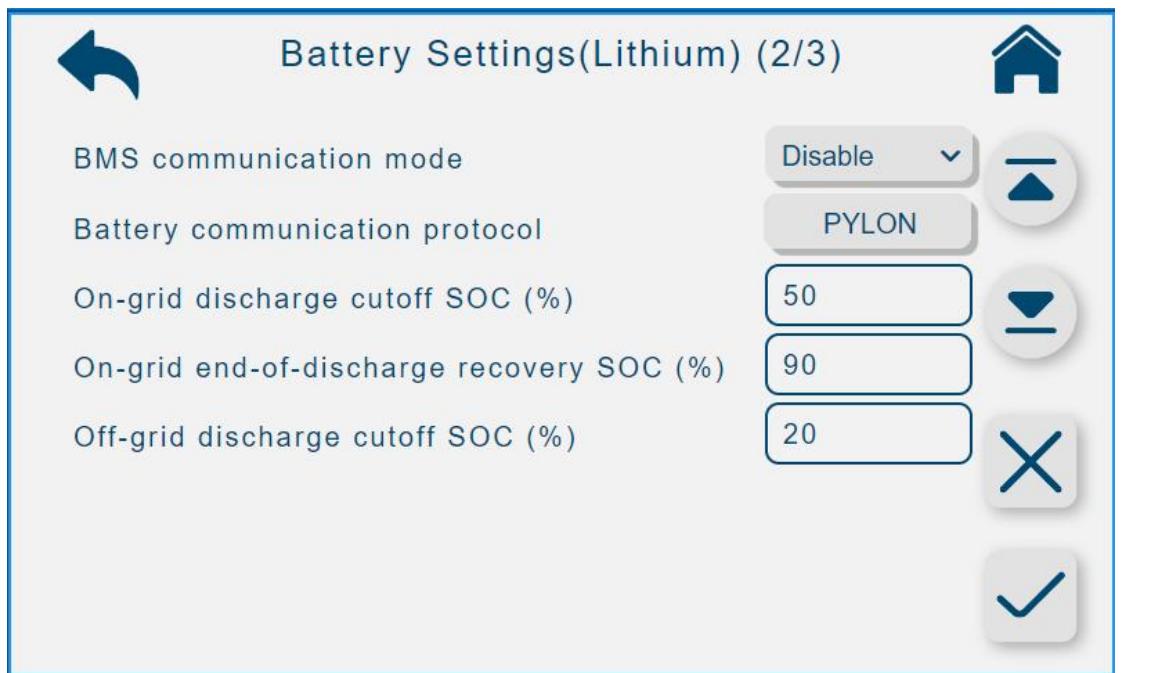

Lithium Battery Settings Interface	
Display Items	Description
BMS communication mode	Disable: Do not select BMS communication. CAN: Select CAN as BMS communication. 485: Select RS485 as BMS communication.
Battery communication protocol	When setting [32] =CAN or 485, it is needed to select the corresponding lithium battery manufacturer/brand for communication. PYLON=PYLONTECH PYLON(Default).
On-grid discharge cutoff SOC	The default On-grid discharge cutoff SOC is 50, with a setting range of 10~90. Lithium batteries end discharge to recover SOC under hybrid loads of the grid and the battery.Only valid for BMS communication lithium batteries. 50 (Default).
On-grid end-of-discharge recovery SOC	The default On-grid end-of-discharge recovery SOC is 90, with a setting range of 20~100. Lithium batteries end discharge to recover SOC under hybrid loads of the grid and the battery.Only valid for BMS communication lithium batteries. 90 (Default).
Off-grid discharge cutoff SOC	The default off-grid discharge cutoff SOC is 20, with a setting range of 5~90. End-of-discharge SOC of lithium batteries under disconnected grid-tied relay and loaded battery.Only valid for BMS communication lithium batteries. 20 (Default).

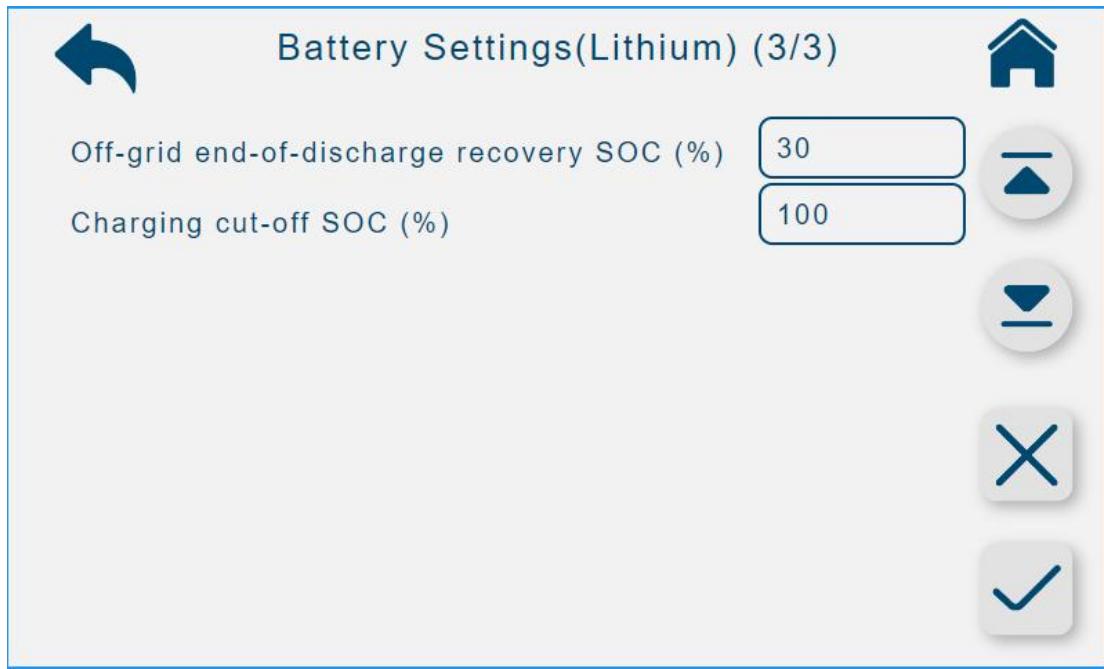

Lithium Battery Settings Interface	
Display Items	Description
Off-grid end-of-discharge recovery SOC	The default off-grid end-of-discharge recovery SOC is 30, with a setting range of 10~100. End-of-discharge SOC of lithium batteries under disconnected grid-tied relay and loaded battery. Only valid for BMS communication lithium batteries. 30 (Default).
Charging cut-off SOC	When the lithium battery reaches the set SOC value during charging, it stops charging and is only effective for BMS communication lithium battery. 100 (Default).

4.9.4 Grid Parameter Settings

Click  to enter the Grid Parameter Settings, as shown in the Figure below

Grid Settings (1/1)

Input mode	UPS
Off-grid output frequency	50HZ
Off-grid output voltage	230V

Grid Settings Interface

Display Items	Description
Off-grid output frequency	50HZ (Default) /60HZ: Bypass adaptive function: when there is grid, it automatically adapts to the frequency of the first grid-on; When there is no grid, the output frequency can be set on the menu, and the default output of 230V AC inverter is 50 Hz.
Off-grid output voltage	The default off-grid output voltage is 230V, with an optional setting of 200/208/220/230/240V. 230V (Default).
Input mode	APL: A wide grid input voltage range for 230V device: 90~280VAC, applicable to household appliances. UPS: A narrow grid input voltage range for 230V device: 170~265VAC, applicable to computers, etc.

4.9.5 Generator Port Function Settings

Click to enter the Generator Port Function Settings page, as shown in the Figure below

Generator interface (1/1)

Generator auto input enabled

Generator input rated power (Kw)

Dual-load enabled

Non-critical load disconnection BAT SOC (%)

Non-critical load period settings

Disable
120
▲

Disable
50
▼

Set Time
X

✓

Generator interface (1/1)

Generator auto input enabled

Generator input rated power (Kw)

Dual-load enabled

Non-critical load disconnection bat volt (V)

Non-critical load period settings

Disable
120
▲


Disable
46
▼

Set Time
X

✓

Generator Settings Interface	
Display Items	Description
Generator auto input enabled	After this function is enabled, when the grid fails and the battery voltage reaches the low-voltage disconnection threshold, the dry contact starts the generator to supply power to loads and charge batteries. When the grid recovers, the power supply will be switched from the generator to the grid. This function is prohibited.(Default)
Non-critical load disconnection bat volt	The default non-critical load disconnection battery voltage is 46V, with a setting range of 42~54V.


	46V (Default).
Non-critical load disconnection BAT SOC (%)	The default non-critical load disconnection battery SOC is 50%, with a setting range of 10~100. 50(Default)
Non-critical load period settings	When enabled, you will be redirected to the time setting page. The left side is the on time setting, and the right side is the off time setting. Time period disable(Default)

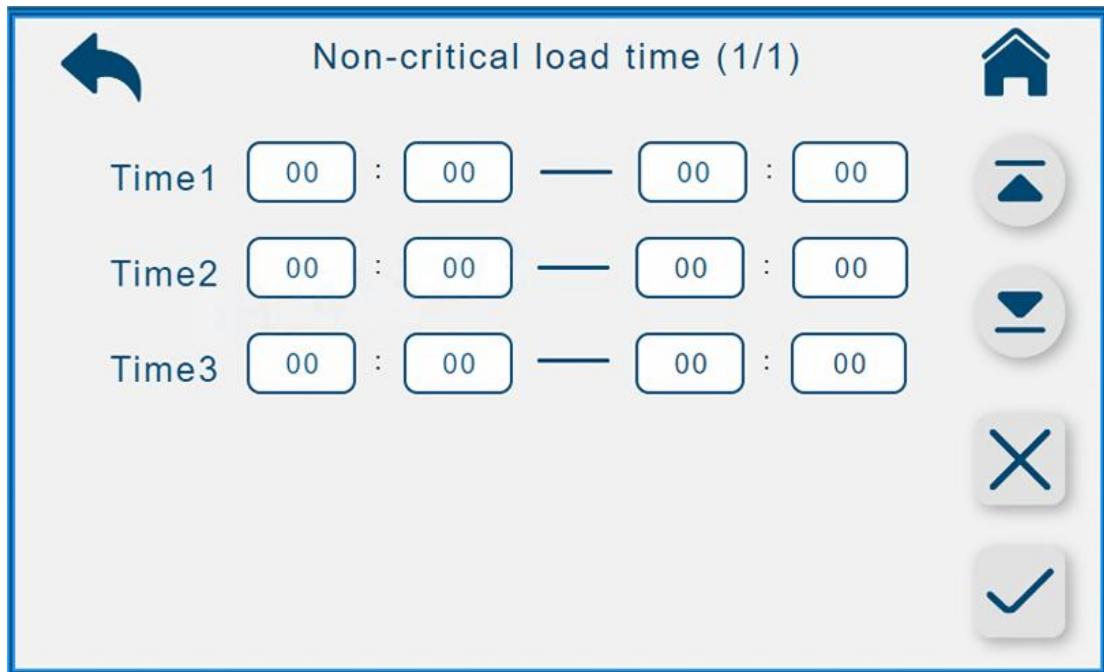


Time Settings Interface	
Display Items	Description
Time1	The Non-critical load operation can be scheduled within this time period.
Time2	Same as above
Time3	Same as above

4.9.6 Advanced Function Settings

Click  to enter the advanced Function Settings page, as shown in the Figure below

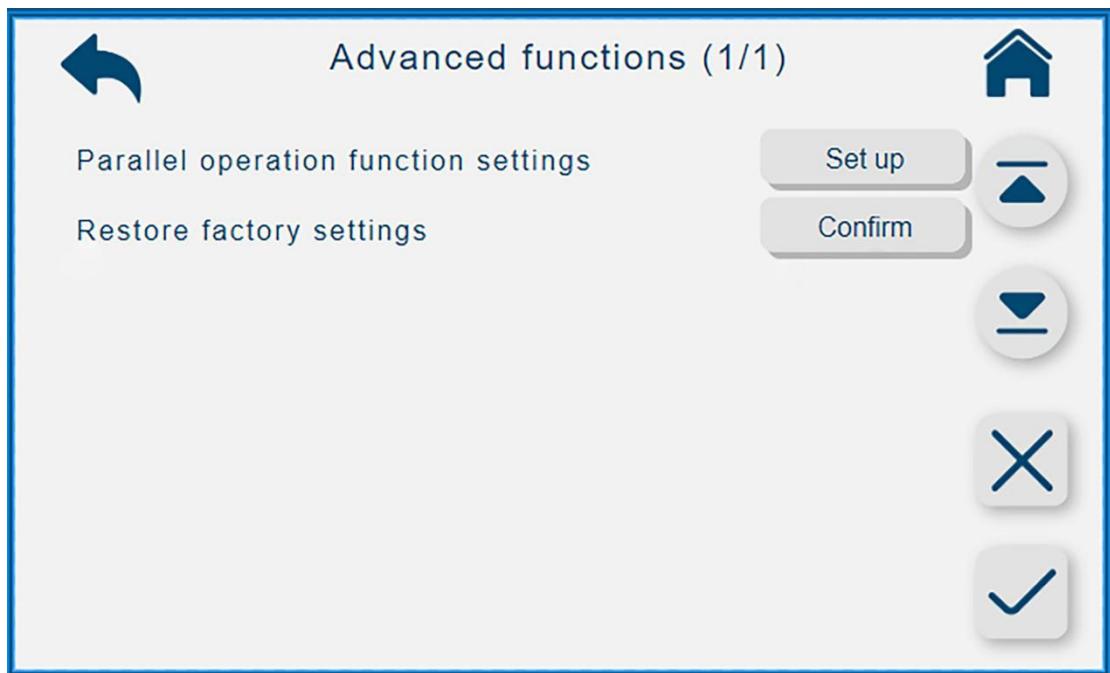

Advanced Settings Interface	
Display Items	Description
Parallel operation function settings	The interface for setting up the parallel machine parameters. Click "Set up" to enter the settings interface.
Restore factory settings	To restore factory settings, click "Confirm" to enter the password input interface.

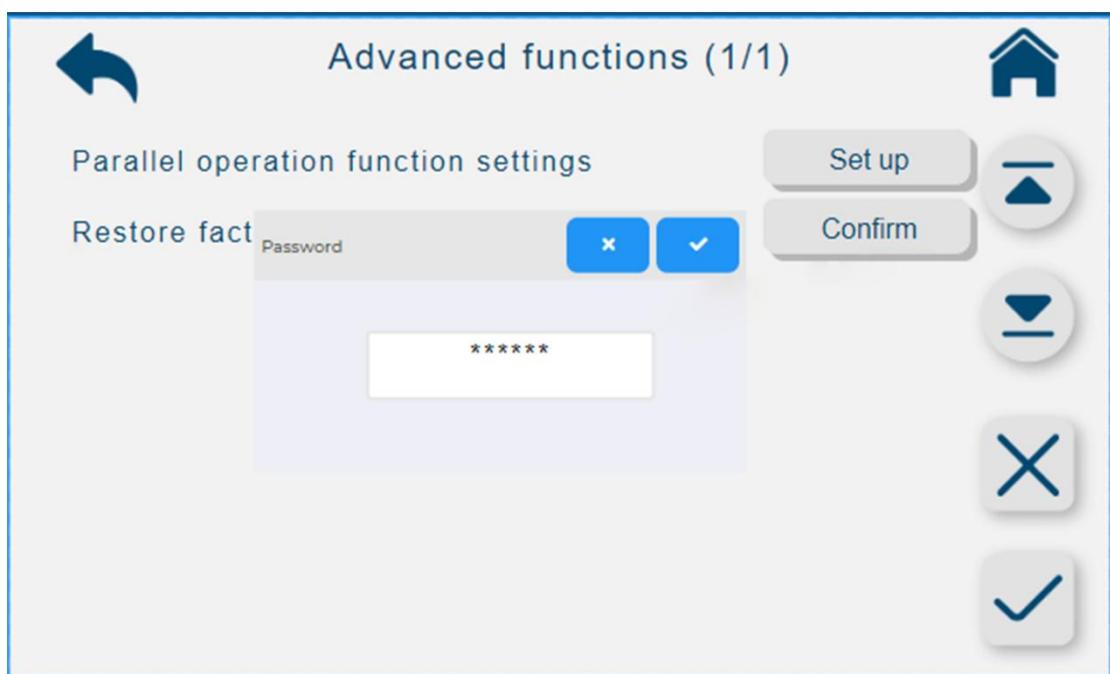

Password Settings Interface	
Description	
Click on the input box to enter the password. The password is "618". Click on the \checkmark to confirm and click on the \times to exit.	

5. Other Functions

5.1 RS485 Communication Function

This port integrates RS485 and CAN:

- RS485 communicates with lithium battery BMS (customized);
- CAN communicates with lithium battery BMS (customized).

Network port pins are defined as follows:




1	485-B	5	CANL
2	485-A	6	NC
3	GND	7	GND
4	CANH	8	BAT_NTC

5.2 USB Port Function

The USB port can connect to the USB disk to upgrade the firmware of the machine. The steps are as follows:

- Step 1: Make a burning USB drive
 1. Make sure the USB drive format is FAT32;

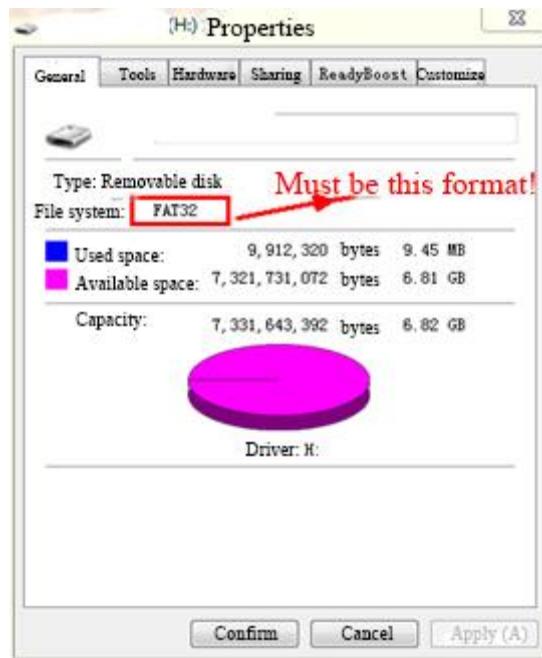

2. All files provided by our company are in the root directory of the USB drive.

Search "USB Disk (H:)"			
Name	Date of Revision	Type	Size
Upgrading.INI	2023/12/12 13:54	Setting Configuration	1 KB
ABAA0001.bin	2023/11/23 11:46	BIN file	512 KB
MDSP_BAaaXX07XX.hex	2023/12/1 10:05	HEX file	277 KB
SDSP_BAaaXXXX06.hex	2023/12/4 8:51	HEX file	125 KB

3. Check if the ini configuration file name is "Upgrading". If not, you need to update the file name to "Upgarding"




➤ Step 2: Burning

Insert the produced USB drive into the USB port for automatic burning. The red light flashes at an interval of 100ms to check whether burning is underway. HEX burning is about 1 min, and BIN file burning is about 15s. Burning multiple files has an interval of about 5s.

5.3 Dry Contact Function

This dry contact can control the ON/OFF of the diesel generator to charge the battery. ① Normally, the NC-N point is closed and the NO-N point is open; ② When the battery voltage reaches the low-voltage disconnection threshold, the relay

coil is energized, and the NO-N point is closed while the NC-N point is open. At this point, the NO-N point can drive resistive loads: 125VAC/1A, 230VAC/1A, and 30VDC/1A. The dry contact interfaces are shown in the figure below.

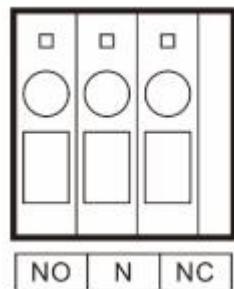

5.4 Wi-Fi Wireless Communication Function

The internal Wi-Fi of the energy storage inverter can be connected to the local router. After the data is uploaded to the server, the user can view the operating parameters and device status anytime and anywhere via the mobile APP while completing some general settings of the inverter with the APP.

6. APP Instructions

1. Please scan the QR code with your mobile phone to download the APP and obtain the instructions.



7. Protection

7.1 Error Code

Buzzer working logic:

- Alarm: The alarm indicator flashes, and the buzzer beeps once every 1s and lasts for 30s before it stops.
- Fault: The fault indicator code is on, and the buzzer stops after a 10-second beep.

Error type	Error code	Error description
Fault	103	Inverter DC offset is too high
	105	Bypass AC output is overloaded
	200	Off-grid output voltage is too low

	201	Off-grid output voltage is too high
	202	Off-grid output has a short circuit
	203	Off-grid output is overloaded
	204	Abnormal off-grid output DC component offset
	301	Battery open circuit
	305	Battery overvoltage
	306	Battery overcurrent
	307	Battery communication fault
	308	BMS fault
	400	PV overvoltage
	403	PV short circuit
	404	PV reverse connection
	500	Abnormal BUS voltage
	501	Abnormal BUS voltage sampling
	502	Abnormal communication in the device
	505	Abnormal connection of the temperature sensor
	506	Device over-temperature
	507	Abnormal relay
	509	Anti-counter-current output timeout
	510	Mismatched software version
	511	Fan fault
	513	Parallel abnormality
Alarm	103	Grid unavailable
	104	Overrange voltage of grid
	105	Overrange frequency of grid
	106	No output voltage from the generator
	107	Overrange output voltage of the generator
	108	Overrange output frequency of the generator
	302	Low battery
	304	Abnormal BMS information
	305	Low battery voltage alarm
	502	Abnormal memory reading and writing

7.2 Troubleshooting (partial)

Fault Code	Fault Description	Troubleshooting
202	Off-grid output short circuit	Check whether the load end wiring is short-circuited. Restart the inverter after clearing the short circuit.
203	Off-grid output overload	Restart the inverter after reducing the electric equipment.
301	Battery open circuit	Check whether the battery circuit breaker is switched on and battery cables are connected.
305	Battery overvoltage	Check whether the battery voltage exceeds the protection value and discharge the battery until it is lower the overvoltage recovery value.
306	Battery	Restart the inverter after reducing the electric

	overcurrent	equipment.
308	BMS fault	Check BMS fault information.
400	PV overvoltage	Use a multimeter to check whether the solar energy input voltage exceeds the maximum PV input voltage of the device.
404	PV reverse connection	Check whether the solar energy input wiring is reversed.
506	Device over-temperature	Check whether the heat dissipation hole of the device is blocked by foreign bodies. The device will return to normal operation after cooling down.
511	Fan fault	Check whether the fan is blocked by foreign bodies.
	No display on the screen	Check whether the device switch is ON and whether the battery and PV circuit breaker are switched on; Press any key on the screen to wake up the screen.

8. System Maintenance

➤ In order to maintain the best performance of the inverter, it is recommended to check the following items three times a year:

- ① Make sure that the airflow around the inverter is not blocked and remove any dirt or debris from the air intake to ensure the intake air volume.
- ② Check the wires for electrical leakage caused by poor insulation due to weathering or damage by other objects.

9. Technical Parameters

Technical Data	AO-5KSL-G3	AO-6KSL-G3
Solar Input Data		
Max. PV Input Power	7500W	9000W
Max. Input Voltage	550V	
Start-up Voltage	120V	
MPPT Voltage Range	90V~500V	
Max. Input Current per MPPT	27A	
Max. Short Circuit Current per MPPT	32A	
Number of MPPT	1	
AC Input Data(Grid&Generator)		
Nominal Input Voltage	230Vac, L/N/PE	
Input Voltage Range	90~280Vac	
Max. Input Current	35A	
Nominal Input Power	8050W	
AC Frequency Range	50/60Hz(Auto sensing)	
Battery Data		
Battery Type	Li-Ion/Lead-acid	
Nominal Battery Voltage	48V	
Battery Voltage Range	42~60V	
Max. Discharge Current	115A	137A
Max. Charge/Discharge Power	5000	6000
Li-Ion Battery Activation	Yes	
Li-Ion Battery Communication	CAN/RS485	
Max. Solar Charge Current	100A	120A
Max. AC Charge Current	80A	100A
Max. Charge Current (PV+AC)	100A	120A
Inverter Output Data		
Nominal Output Power	5000W	6000W

Peak Apparent AC Power	10000VA	12000VA
Nominal AC Voltage	230V	
Nominal Grid Frequency	50/60Hz	
Voltage Waveform	Pure Sine wave	
Transfer Time	10ms	
Max. Output Current	22A	27A
Overload Protection	30s@102%-110% load; 10s@110%-130% load; 5s@130%-200% load	
THDv (@linear load)	<3%	
Efficiency		
Peak Efficiency	94%	
MPPT Efficiency	≥99.9%	
Protection		
DC Surge Protection	Yes	
AC Surge Protection	Yes	
AC Short circuit Protection	Yes	
System Parameters		
Dimension (W*H*D)	333*505*120mm	
Weight	10.6kg	
Relative Humidity	5%~95% (Non-condensing)	
Operating Temperature Range	-10°C~50°C	
Noise Emission	≤50dB	
Altitude	4000m	
Cooling Method	Fan Cooling	
Ingress Protection	IP21	
Characteristic		
Number of AC Output	2	
Display	LCD&APP	
Communication Interface	RS485/ USB /CAN/ Wi-Fi	
Parallel Capability	9	